

JVC

SERVICE MANUAL

MODEL No. **RX-150BK/RX-150LBK**



This unit is almost the same as the RX-111BK/RX-111LBK.
The differences are listed herein.
When using this Service Manual, refer to the previously published
RX-111BK/RX-111LBK Service Manual (No. 2871, Nov. 1985).

Note: The marks for Designated Areas

J	U.S.A.	E, LE	Europe
C	Canada	LBS	U.K.
A	Australia	P, PG	U.S. Military Market
G	West Germany	U	Other Countries
		No mark indicates all areas.	

New Parts

1. Printed Circuit Board Ass'y and Parts List

Refer to page 2-10 in the RX-111BK/LBK Service Manual.

Parts Name	Item No.	Parts Number		Areas
		RX-111BK/LBK	RX-150BK/LBK	
Audio PCB Ass'y		ENH-055H	ENH-092A	J
		ENH-055I	ENH-092B	C
		ENH-055J	ENH-092C	U, P, PG
		ENH-055K	ENH-092D	E, LE
		ENH-055L	ENH-092E	LBS
		ENH-055M	ENH-092F	G
		ENH-055N	ENH-092G	A
Headphone Jack	P901	QMS6302-128	QMS6302-131	

2. Exploded View Parts List

Refer to page 2-3 in the RX-111BK/LBK Service Manual.

Parts Name	Item No.	Parts Number		Areas
		RX-111BK/LBK	RX-150BK/LBK	
Front Panel Ass'y	1	----- EFP-RX111BKE EFP-RX111LBKE	EFP-RX150BKJ EFP-RX150BKE EFP-RX150LBKE	J, C, U, P, PG E, A, G LE, LBS
Front Plate	1-4	E24942-014 E24942-015 E24942-016	E24942-017 E24942-018 E24942-019	E, A, G LE, LBS J, C, U, P, PG
Window Screen	1-5	E303676-005	E303676-006	
Indicator Sheet	1-6	E303678-005	E303678-006	
Front Base	1-7	E11083-003 E11083-004	E11083-005 E11083-006	J, C, U, P, PG, E, A, G LE, LBS
Front Panel	1-8	E24940-011 E24940-012	E24940-013 E24940-014	J, C, U, P, PG, E, A, G LE, LBS
Metal Cover	23	E24633-003	E24633-005	
Rear Panel	34	E24944-010 E24944-011 E24944-012 E24944-013	E24944-014 E24944-015 E24944-016 E24944-017	J, C U, P, PG E, A, LE, LBS G

3. Packing Materials Parts List

Refer to page 2-13 in the RX-111BK/LBK Service Manual.

Parts Name	Item No.	Parts Number		Areas
		RX-111BK/LBK	RX-150BK/LBK	
Packing Case	1	PK-RX111BKJ (E300382-621)	PK-RX150BKJ (E300382-711)	J, C, P, PG
		PK-RX111BKE (E300382-622)	PK-RX150BKE (E300382-712)	U, E, A, G
		PK-RX111LBK (E300382-623)	PK-RX150LBK (E300382-713)	LE, LBS

4. Accessories Parts List

Refer to page 2-13 in the RX-111BK/LBK Service Manual.

Parts Name	Parts Number		Areas
	RX-111BK/LBK	RX-150BK/LBK	
Instruction Book	E30580-1295A E30580-1295ABS	E30580-1369A E30580-1369ABS	J, C, U, P, PG, E, A, G, LE LBS

JVC

VICTOR COMPANY OF JAPAN, LIMITED


AUDIO PRODUCTS DIVISION, YAMATO PLANT, 1644, SHIMOTSURUMA, YAMATO-SHI, KANAGAWA-KEN, 242, JAPAN

JVC

SERVICE MANUAL

STEREO RECEIVER

MODEL
RX-111BK
RX-111LBK

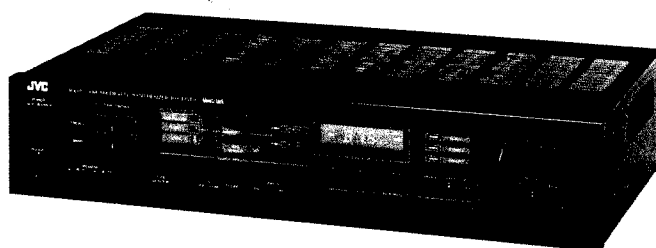

RX-111BK



RX-111LBK

Contents

Safety Precautions	1-1	5. Block Diagram	1-9
1. Specifications	1-2	Parts List	Separate-volume Insertion
2. Names of Controls and Their Functions	1-3	6. RX-111BK/RX-111LBK Schematic Diagram	
3. Removal Procedures	1-5	6-(1) RX-111BK Tuner Section	1-10
3-(1) Metal cover section	1-6	6-(2) RX-111LBK Tuner Section	1-11
3-(2) Front panel section	1-6	6-(3) RX-111BK/RX-111LBK Amplifier Section ..	1-12
3-(3) Chasis base section	1-6	6-(4) Internal Block Diagram of	
4. FM/AM(MW/LW) Tuner Alignment Procedures ...	1-7	Major LSI ICs	1-13

Safety Precautions

1. The design of this product contains special hardware, many circuits and components specially for safety purposes.

For continued protection, no changes should be made to the original design unless authorized in writing by the manufacturer. Replacement parts must be identical to those used in the original circuits. Service should be performed by qualified personnel only.

2. Alterations of the design or circuitry of the product should not be made. Any design alterations or additions will void the manufacturer's warranty and will further relieve the manufacturer of responsibility for personal injury or property damage resulting therefrom.

3. Many electrical and mechanical parts in the product have special safety-related characteristics. These characteristics are often not evident from visual inspection nor can the protection afforded by them necessarily be obtained by using replacement components rated for higher voltage, wattage, etc. Replacement parts which have these special safety characteristics are identified in the parts list of Service manual. Electrical components having such features are identified by shading on the schematics and by (Δ) on the parts list in Service manual. The use of a substitute replacement which does not have the same safety characteristics as the recommended replacement part shown in the parts list in Service manual may create shock, fire, or other hazards.

4. The leads in the products are routed and dressed with ties, clamps, tubings, barriers and/or the like to be separated from live parts, high temperature parts, moving parts and/or sharp edges for the prevention of electric shock and fire hazard.

When service is required, the original lead routing and dress should be observed, and they should be confirmed to be returned to normal, after re-assembling.

5. To confirm the polarity of the power cord and AC outlet (Canada only).

When replacing the power cord or the AC outlet, make sure that the power switch or the protection device (the primary fuse etc.) is NOT connected to the ground power side of the plug and AC outlet (wider blade of plug or wider hole of the AC outlet).

6. Leakage current check

(Safety for electrical shock hazard)

After re-assembling the product, always perform an isolation check on the exposed metal parts of the Products (antenna terminals, knobs, metal cabinet, screw heads, headphone jack, control shafts, etc.) to be sure the product is safe to operate without danger of electrical shock.

Do not use a line isolation transformer during this check.


- Plug the AC line cord directly into the AC outlet. Using a "Leakage Current Tester", measure the leakage current from each exposed metal part of the cabinet, particularly any exposed metal part having a return path to the chassis, to a known good earth ground. Any leakage current must not exceed 0.5 mA AC (r.m.s.).

- Alternate check method.

Plug the AC line cord directly into the AC outlet. Use an AC voltmeter having 1,000 ohms per volt or more sensitivity in the following manner. Connect a 1500 Ω 10 W resistor paralleled by a 0.15 μ F AC-type capacitor between an exposed metal part and a known good earth ground.

Measure the AC voltage across the resistor with the AC voltmeter.


Move the resistor connection to each exposed metal part, particularly any exposed metal part having a return path to the chassis, and measure the AC voltage across the resistor. Now, reverse the plug in the AC outlet and repeat each measurement. Any voltage measured must not exceed 0.75 V AC (r.m.s.). This corresponds to 0.5 mA AC (r.m.s.).

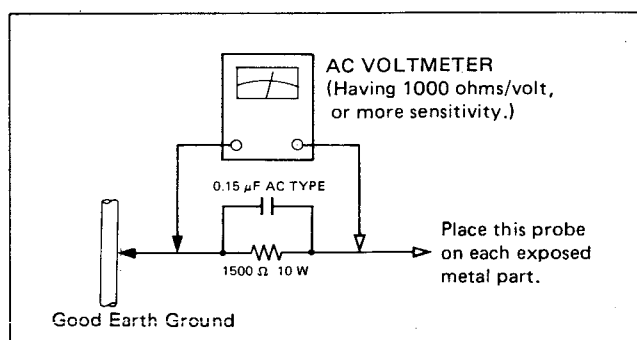

CHECKING YOUR LINE VOLTAGE (Except for U.S.A., Canada, Australia, U.K. and Continental Europe.)

Before inserting the power plug, please check this setting to see that it corresponds with the line voltage in your area. If it doesn't, be sure to adjust the voltage selector switch to the proper setting before operating this equipment. The voltage selector switch is located on the rear panel.

CAUTION Before selecting the "Voltage selector switch" to proper voltage disconnect the power plug.



Connection Diagram

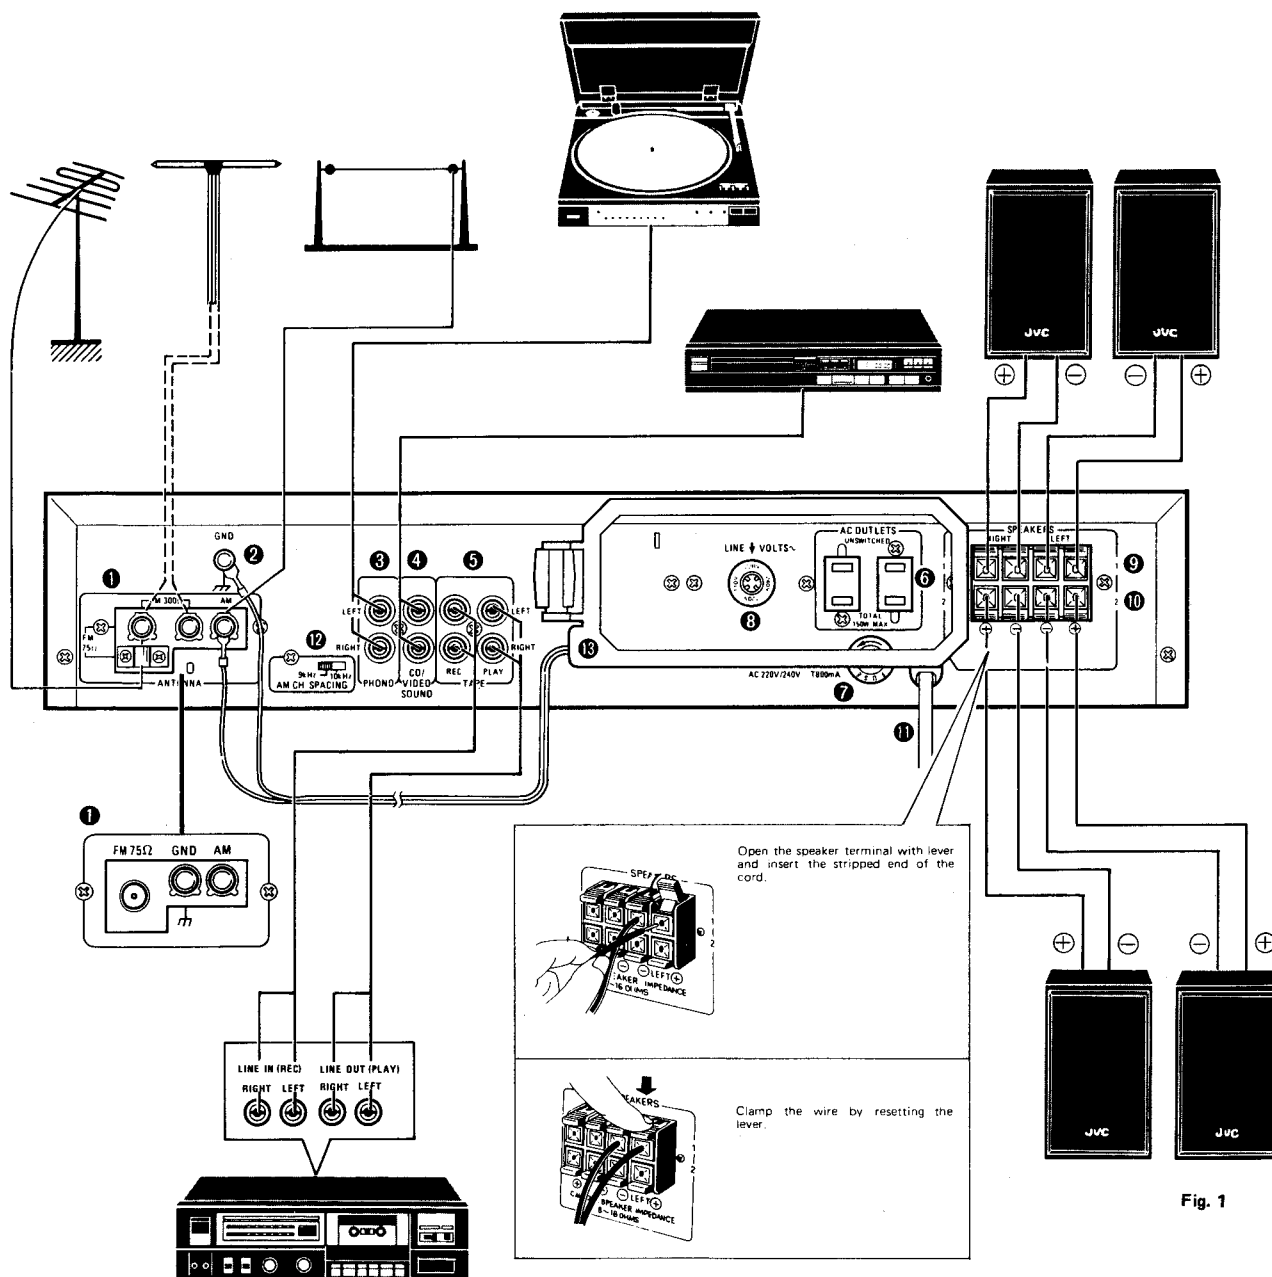


Fig. 1

- 1 External ANTENNA terminals
- 1 External ANTENNA terminals (for W. Germany only)
- 2 GND terminal
This terminal is used for the connection of an AM loop antenna and turntable.
- 3 PHONO terminals
- 4 CD/VIDEO SOUND terminals
- 5 TAPE terminals
- 6 AC OUTLETS*
- 7 Fuse holder**
- 8 Voltage selector**
When this equipment is used in an area where the supply voltage is different from the preset voltage, reset the voltage selector to the correct position.
- 9 SPEAKERS system 1 terminals
- 10 SPEAKERS system 2 terminals
- 11 Power cord
- 12 AM channel spacing switch**
- 13 AM loop antenna
* Not provided on units for Continental Europe, the United Kingdom and Australia.
** Not provided on units for U.S.A., Canada, Continental Europe, the United Kingdom and Australia.

Notes:

1. Switch the power off when connecting any components.

2. Connect source components correctly. Reversed channels will degrade the stereo effect.
3. Connect speakers with correct polarity; (+) to (+) and (-) to (-). Reversed polarity will degrade the stereo effect. Be careful to prevent contact between adjacent speaker wires.
4. Use speakers with the correct impedance. This receiver is for use with speakers with an impedance of from 8 to 16 ohms.
5. The AC outlet provides power even when the front panel POWER switch is set to STAND BY. Do not connect equipment requiring more than 150 watts.

ANTENNAS

AM (MW/LW) loop antenna (Fig. 2, 3)

This antenna is for the reception of local AM broadcasts. If it is too close to the rear panel, pull it away from the panel and adjust it for best reception by tilting. This loop antenna can be tilted outward by 180°. Make sure to connect the ground lead to the GND terminal.

When too much noise occurs (Fig. 4)

Change the direction of the loop antenna or remove it and reinstall it in a position that gives best reception. The loop antenna can be removed easily by pulling it towards you.

AM (MW/LW) external antenna (Fig. 5)

If AM reception is not good, connect an external AM antenna (single-wire antenna) to the AM ANTENNA terminal.

Notes:

- If the provided loop antenna is not installed or the antenna cord touches to the rear panel, it will be impossible to receive AM broadcasts.
- When installing an AM external antenna, leave the AM loop antenna connected.

FM antennas

• 75-ohm antenna with coaxial lead (Fig. 6)

Loosen the screws on the bracket and insert the cable into the ring from below. Then connect the stripped core to the upper terminal. The bracket ring works as the ground terminal.

• Feeder antenna (Fig. 7)

Connect to the 300-ohm terminal.

Take care that the wires of the feeder antenna do not touch any other terminal.

- 75-ohm antenna with coaxial type connector (DIN 45 332) for W. Germany (Fig. 8)

Connect to the 75-ohm terminal.

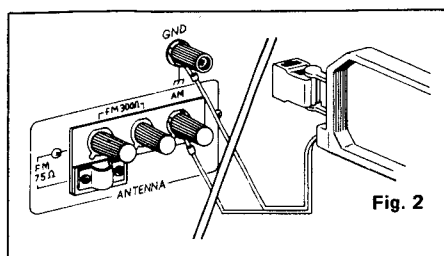


Fig. 2

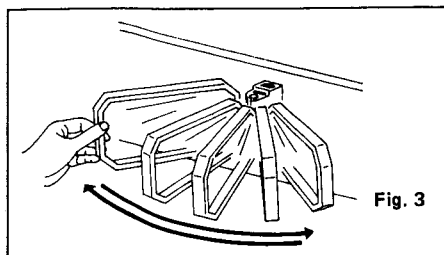


Fig. 3

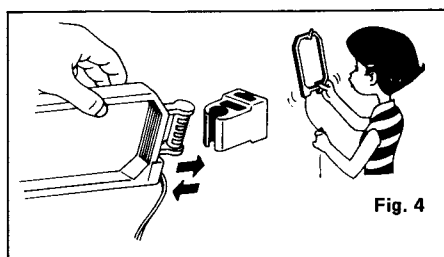


Fig. 4

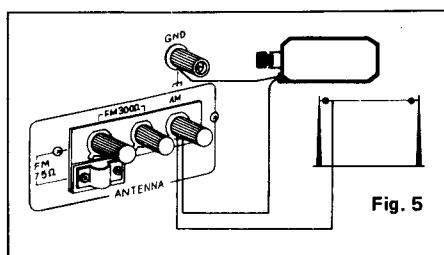


Fig. 5

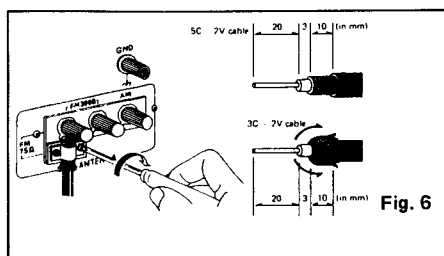


Fig. 6

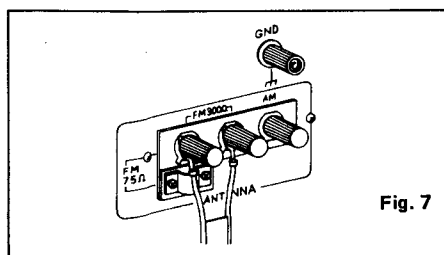


Fig. 7


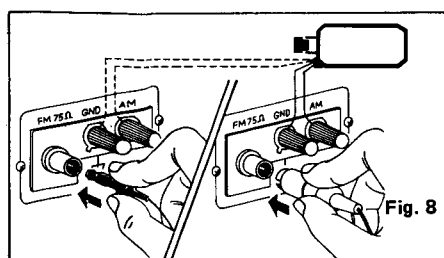


Fig. 8

2. Names of Controls and Their Functions

RX-111BK

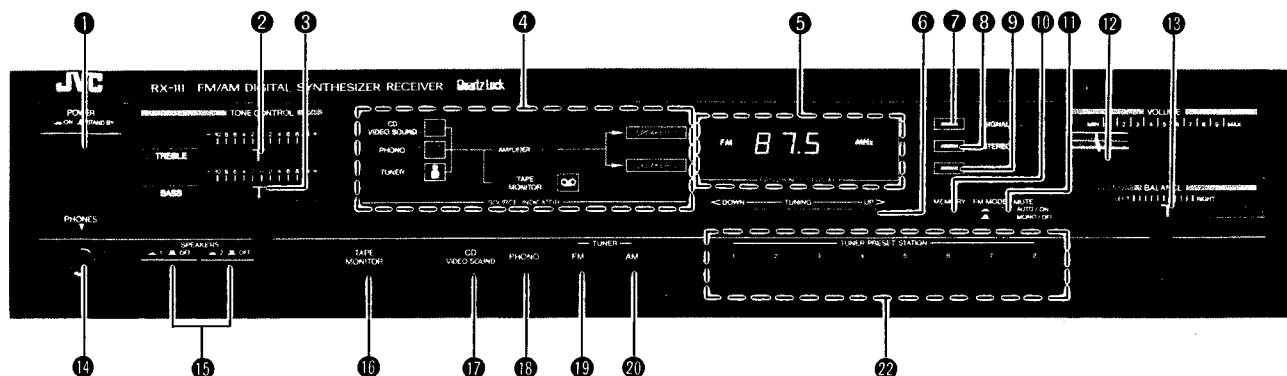

1 POWER

ON (—): Press to set to this position to turn the power on.

STAND BY (—): When the power cord is plugged into an AC outlet, the memory circuit operates and the preset stations and the source selectors are not subject to cancellation or accidental alteration. The preset data and the source select data are maintained even in the case of a power failure or when the power cord is disconnected, if the period power is not applied does not exceed a couple of days.

Notes:

- Even when the **POWER** button is set to **STAND BY**, this receiver consumes a small amount of electricity (5 watts). To shut the power completely off, disconnect the power cord.
- An electronic source selector is used in this unit. When the **POWER** button is first switched on, two or more sources or no source may be selected. Make sure to input the source select data by pressing one of the source selectors.

2 TREBLE

Slide to the right to boost treble response, to the left to decrease it.

3 BASS

Slide to the right to boost bass response, to the left to decrease it.

4 Source indicators

The indicator corresponding to the source select button pressed lights.

5 Frequency display

The tuned-in frequency is displayed digitally as follows:

For AM reception: Four digits (kHz) are displayed.

For LW reception: Three digits (kHz) are displayed.


(RX-111LBK only)

For FM reception: Five digits (MHz) are displayed.

(for continental Europe, the U.K., Australia and other areas.)

Four digits (MHz) are displayed.

(for the U.S.A. and Canada)

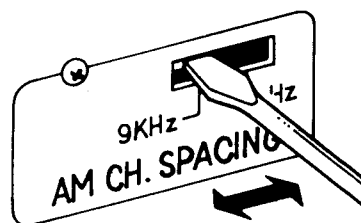

Switch over using the tip of a screwdriver as shown in Fig. above.

6 TUNING UP/DOWN

When the UP/DOWN-scanning button is pressed, the frequency changes in predetermined steps (see table below). Tapping this button changes the tuner step by step; pressing continuously (more than 0.5 sec.) changes tuning by high speed scanning which stops when the button is released. After choosing the frequency you want to listen to, hold the button pressed to scan rapidly until the display approaches the desired frequency, then tap the button lightly to tune precisely.

Channel spacing

AM channel spacing knob (RX-111BK only) is provided on the rear panel for selecting 9 kHz or 10 kHz steps according to your area.

Band Area	FM	AM (MW)	AM (LW)
U.S.A., Canada	100 kHz	10 kHz	—
Europe, Australia	50 kHz	9 kHz	1 kHz
Other areas	*50 kHz	*9 kHz	—
	100 kHz	10 kHz	

Note: *Preset at the factory.

1. Specifications

AMPLIFIER SECTION

'78 IHF

RMS Power : 25 watts per channel, min. RMS, both channels driven, into 8 ohms from 40 Hz to 20 kHz, with no more than 0.5 % total harmonic distortion.

27 watts per channel, min. RMS, both channels driven into 8 ohms at 1 kHz with no more than 0.7 % total harmonic distortion.

Total Harmonic Distortion : 0.1 % at 25 watts (1 kHz, 8 ohms)
 Input Sensitivity/Impedance
 PHONO : 2.5 mV/47 kohms
 TAPE PLAY/CD/ : 150 mV/40 kohms
 VIDEO SOUND :
 Recording Output Level : 140 mV
 Frequency Response : 20 Hz — 20 kHz, +1 dB, -1 dB (8 ohms)

Tone control
 TREBLE : ± 8 dB (10 kHz)
 BASS : ± 8 dB (100 Hz)
 Signal to Noise Ratio
 PHONO : 70 dB ('66 IHF) 59 dB (DIN)
 78 dB ('78 IHF, Rec out)
 TAPE PLAY/CD/ : 91 dB ('66 IHF) 64 dB (DIN)
 VIDEO SOUND : 74 dB ('78 IHF)

FM TUNER SECTION

'78 IHF

DIN (for Europe)

Tuning Range : 87.5 MHz—108.0 MHz 87.5 MHz—108.0 MHz
 Usable Sensitivity : Mono 10.8 dBf
 0.95 μ V/75 ohms 1.5 μ V/75 ohms
 1.9 μ V/300 ohms —
 50 dB Quieting Sensitivity : Mono 16.3 dBf
 (1.8 μ V/75 ohms)
 (3.6 μ V/75 ohms)
 Stereo 38.3 dBf
 (22.5 μ V/75 ohms)
 (45 μ V/300 ohms)
 S/N 46 dB Stereo : — Stereo 23 μ V/75 ohms
 Sensitivity : —
 Signal to Noise Ratio : Mono 80 dB Mono 72 dB
 Stereo 73 dB (A-net.) Stereo 64 dB (weighted)
 (at 98 MHz, 80 dBf)
 Total Harmonic Distortion : Mono 0.15 % Mono 0.1 %
 1 kHz Stereo 0.20 % Stereo 0.3 %
 Frequency Response : 30 Hz — 15 kHz, +0.3 dB, -5 dB
 Capture Ratio : 1.5 dB 1.0 dB
 Alternate Channel Selectivity : 60 dB, ± 400 kHz 55 dB, ± 300 kHz
 Image Response Ratio : 55 dB at 98 MHz
 IF Response Ratio : 85 dB at 98 MHz
 Stereo Separation : 40 dB at 1 kHz

AM TUNER SECTION

'78 IHF

DIN (for Europe)

MW

Tuning Range : 522 kHz—1611 kHz 522 kHz—1611 kHz
 Channel space : 9 kHz
 Channel space : 520 kHz—1710 kHz
 10 kHz
 Sensitivity : 350 μ V/m at 1000 kHz 350 μ V/m at 999 kHz
 30 μ V at 1000 kHz 30 μ V at 999 kHz
 Signal to Noise Ratio (100mV/m) : 50 dB at 1000 kHz 50 dB at 999 kHz
 45 dB for R-X110L/LB
 Selectivity : 38 dB, ± 10 kHz 35 dB, ± 9 kHz
 at 1000 kHz at 999 kHz

LW (RX-111LBK only)

Tuning Range : 153 Hz — 360 kHz
 Sensitivity : 600 μ V/m at 245 kHz
 100 μ V at 245 kHz
 Signal to Noise Ratio (100 mV/m) : 45 dB at 245 kHz
 Selectivity : 45 dB ± 9 kHz at 245 kHz


Design and specifications subject to change without notice.

Power Specifications

Areas	Line Voltage & Frequency	Power Consumption
U.S.A., Canada	AC 120 V, 60 Hz	100 W, 130 VA
Europe	AC 220 V $\sim$, 50 Hz	80 watts
U.K., Australia	AC 240 V $\sim$, 50 Hz	80 watts
Other Areas	AC 110/120/220/240 V $\sim$, Selectable, 50/60 Hz	80 watts

Dimensions and Weight

Dimensions			Weight
Height	Width	Depth	Net
92 mm (3-5/8")	435 mm (17-1/8")	265 mm (10-7/16")	3.8 kg (8.4 lbs)

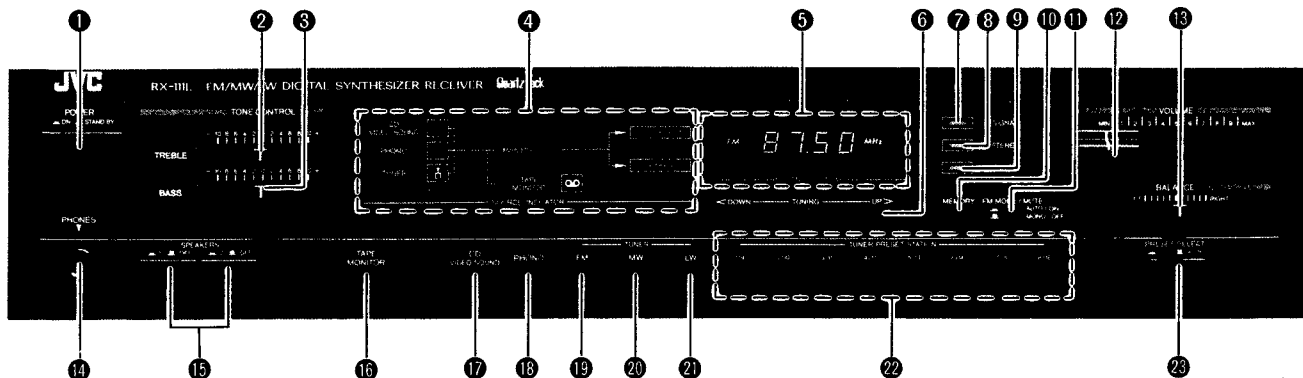

7 SIGNAL indicator

This LED lights when the signal is input. Tune to the required frequency while watching the frequency display **5**.

8 FM STEREO indicator

This LED lights when tuned to an FM stereo broadcasts.

9 MEMORY indicator

When the MEMORY button is pressed, this MEMORY indicator lights to show that the unit is ready to store a preset frequency in memory. This indicator will go out automatically in about 10 sec. or when the station select button is pressed.

10 MEMORY

Press this button and the MEMORY indicator will light to show that memory is ready to receive a frequency. (This button is non-locking type.) Pressing the station select button while the MEMORY indicator is lit (for about 10 sec.) stores the frequency being received in memory.

When the MEMORY indicator is not lit, the memory function does not operate.

11 FM MODE (MUTE)

This button is used to select FM AUTO (MUTE ON)/MONO (MUTE OFF) mode. When stereo reception is possible, set this button to AUTO (MUTE ON) (▲). This also eliminates inter-station noise during FM tuning.

When signals are too weak to be received or a stereo broadcast is unsatisfactory, set to MONO (MUTE OFF) (■). Stereo will be changed to mono, but sound quality will be improved. This is convenient to bring in distant FM stations without muting.

12 VOLUME

This knob has an auto loudness effect. When the volume is lowered, the sound with compensated high and low frequencies can be obtained.

13 BALANCE

Use to adjust the balance between the left and right speakers.

14 Headphone jack (PHONES)

Plug stereo headphones into this jack for private listening and to monitor recording. For private listening, set the SPEAKERS buttons to OFF.

15 SPEAKERS-1/SPEAKERS-2

Press to switch the speakers connected to the SPEAKERS 1 and/or 2 terminals on and off.

Note:

• When speakers are connected to only one system of the SPEAKERS terminals, press only the SPEAKERS button of the system connected; if both buttons are pressed, sound will not be heard from either speaker system. When two pairs of speakers are connected and either or both SPEAKERS buttons is/are pressed, sound will be heard from either or both speaker system(s).

16 TAPE MONITOR

Press to listen to the tape deck connected to the TAPE terminals. Press it again to hear the source selected with the source select buttons.

17 CD/VIDEO SOUND

Press to hear or record sound from compact disc, video, or other equipment connected to the CD/VIDEO SOUND terminals on the rear panel.

18 PHONO

Press to hear or record sound from the turntable connected to the PHONO terminals on the rear panel.

19 FM

Press to switch on the FM tuner section.

20 AM (for RX-111BK): MW (for RX-111LBK)

Press to switch on the AM (MW) tuner section.

21 LW (RX-111LBK only)

Press to switch on the LW tuner section.

22 Station select buttons

These buttons are used to select one of the preset stations or to store the station frequency in memory. If one of these buttons is pressed when the MEMORY button is pressed in, the frequency being received will be stored in memory.

Up to 16 FM and AM stations can be stored in memory, 8 for each position of the PRESET SELECT button (Continental Europe, U.K. and Australia).



8 FM and AM stations can be preset in memory (U.S.A., Canada and other countries).


When you switch from radio reception to any other mode or set the power button to STAND BY, then switch back to the radio or switch the power on again, you will hear the station previously selected.

23 PRESET SELECT

Press to set to channels 1-8 (▲) or channels 9-16 (■). (only for Continental Europe, U.K. and Australia.)

3. Removal Procedures

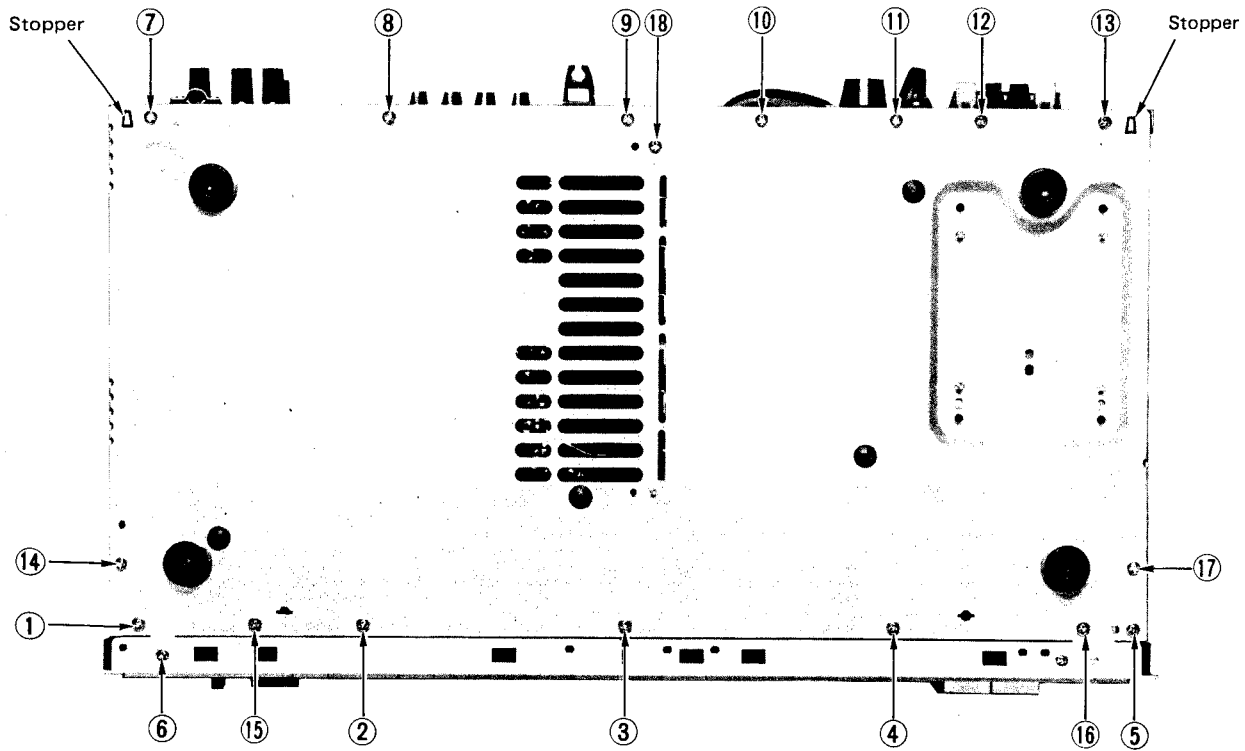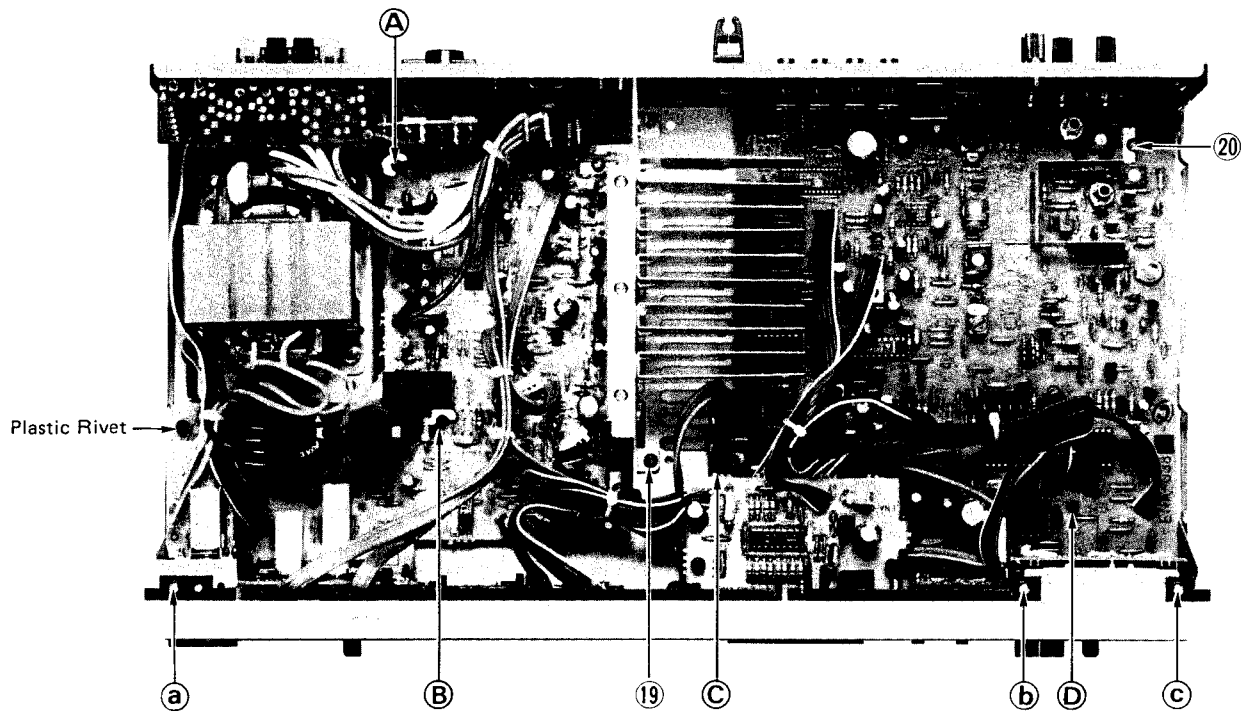

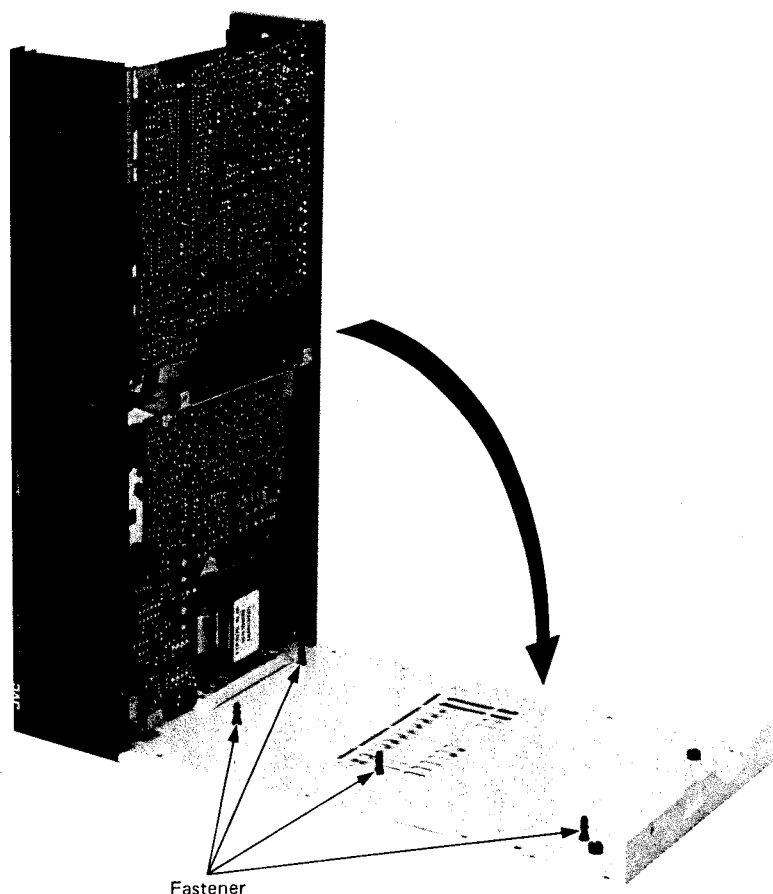

3-(1) Metal Cover Section

1. Remove the screws securing the metal cover — two screws from its two sides and three from its rear side.
2. Extract the metal cover while lifting its rear side.

3-(2) Front Panel Section

1. Demount the metal cover (refer to item 3-(1) above).
2. Remove three screws (a), (b) and (c).
3. Remove five screws (1) through (5) — namely, those screws that jointly secure the front panel and the chassis base through the panel bottom side.
4. Remove screw (6) — the one that secures the front panel through its lower side.

3-(3) Chassis Base Section

1. Demount the metal cover (refer to item 3-(1) above).
2. Remove 16 screws (1) through (5) and (7) through (17) — those screws that secure the chassis base through its bottom side.
3. Remove two screws (18) and (19) securing the heat sink.
4. Remove screw (20) securing the tuner PC board.
5. Extract the plastic rivet securing the amplifier PC board.
6. Remove four fasteners (A), (B), (C), and (D) securing the tuner PC board and the amplifier PC board. (Push in the fasteners while using radio-repair pliers or a similar tool to grip the fastener head.)
7. Open the chassis base while loosening the stopper engaged with the rear panel.

4. FM/AM (MW/LW) Tuner Alignment Procedures

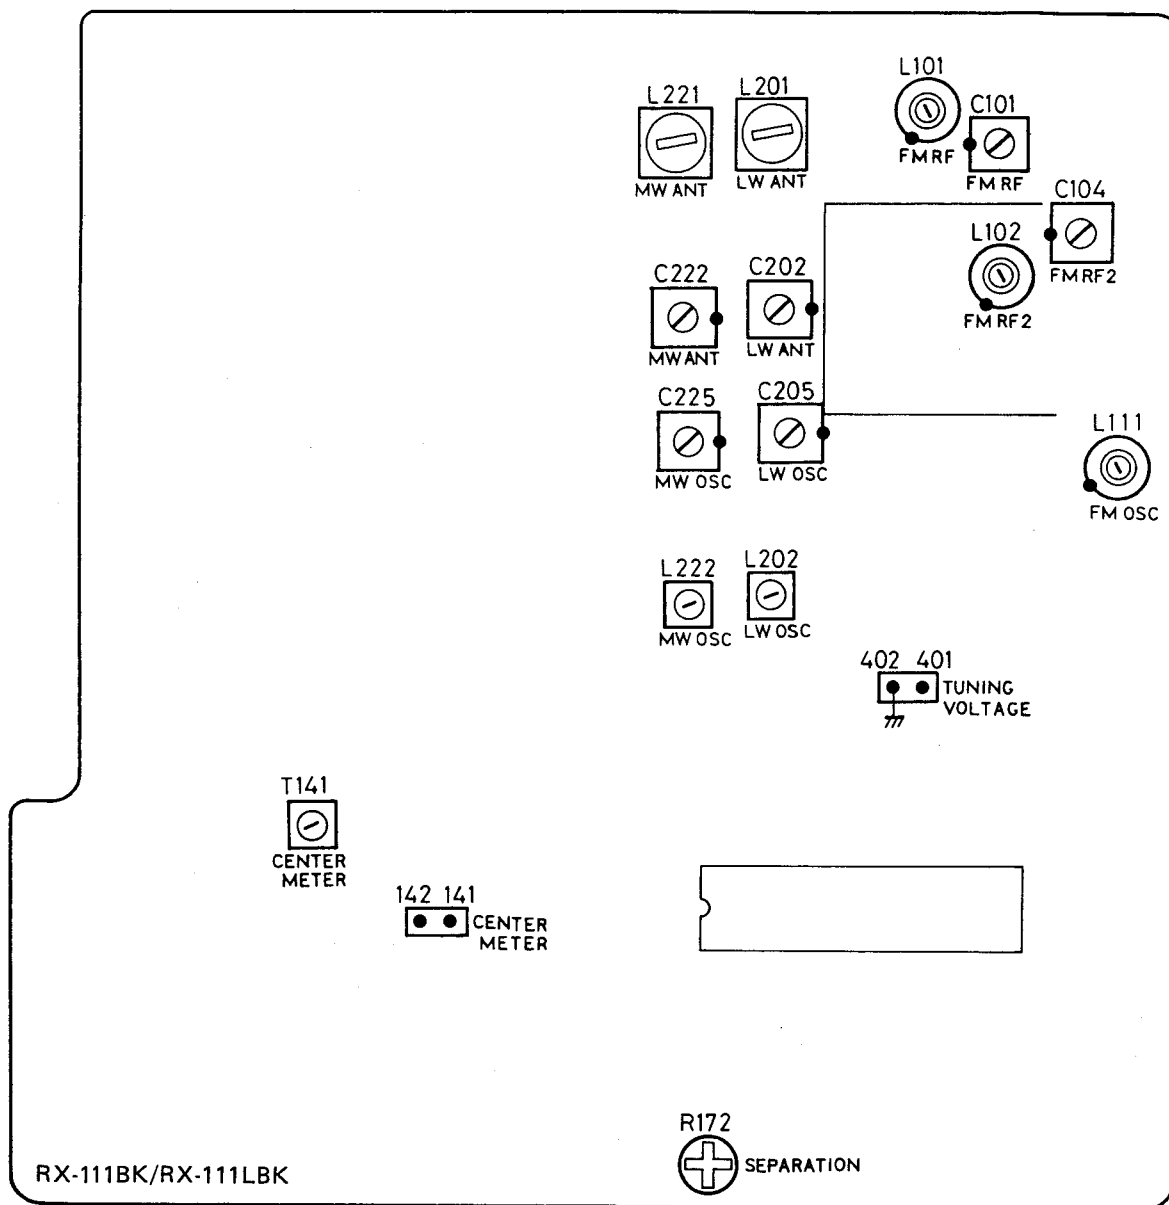


Fig. 6

FM Section

Band Cover

1. Set the frequency display to 108.0 MHz.
2. Connect a DC VTVM to TP401 and TP402 (GND).
3. Adjust L111 so that the VTVM shows 9.00 V.
4. And set the frequency display to 87.5 MHz.
5. Check the VTVM voltage reading $1.60 \text{ V} \pm 0.5 \text{ V}$.

Note: After adjustment, confirm that the band cover is as follows: (for West Germany only)

FM: Low-end 87.5 MHz -300 kHz
High-end 108.0 MHz +500 kHz

Sensitivity

Low Frequency

1. Connect an RF generator to 75 Ω antenna terminals on the rear panel through a dummy antenna. (FM 75 Ω :

2. Set an RF generator to 90 MHz, a modulation of 1 kHz and a deviation of 75 kHz to provide an input of 1 μV .
3. Connect a VTVM and an oscilloscope to the Rec. out jacks on the rear panel.
4. Set the frequency display to 90 MHz.
5. Adjust coils L101, L102 to maximize the output.

High Frequency

6. Set the RF generator to 106 MHz, a modulation of 1 kHz and a deviation of 75 kHz to provide an input of 1 μV .
7. Set the Frequency Display to 106 MHz.
8. Adjust the FM trimmers C101, C104 to maximize the output.
9. Repeat these high and low frequencies adjustment alternately until maximum sensitivity is obtained.

Discriminator, Distortion and Signal Gain

1. Press to FM position.
2. Connect an RF generator, 1 kHz modulation and a 75 kHz deviation to the antenna terminals on the rear panel through a dummy antenna.
3. Connect an oscilloscope, Distortion Meter and VTVM to the Rec. out jacks on the rear panel.
4. Set the RF generator to 98 MHz, generator output to minimize.
5. Set the Frequency Display to a 98 MHz.
6. Connect a DC VTVM between TP141 and TP142.
7. And set the RF generator output to 0.5 mV.
8. Adjust the core of T141 for DC VTVM reading of 0 (zero) mV.

Stereo Separation (for Europe, U.K. and Australia only)

1. Set the stereo signal generator as follows: 400 Hz modulation frequency, 7.5 kHz deviation pilot, 67.5 kHz main and sub carriers. Connect its output to the RF generator.
2. Connect an RF generator to the antenna terminals through a dummy antenna.
3. Switch the selector of stereo modulator to left channel modulation.
4. Adjust R172 so that the output of right channel is minimized.
5. Switch the selector of the modulator to right channel modulation.
6. Adjust R172 so that the left channel is minimized.
7. Set R172 to an average, if the separation of left and right is different.

AM(MW) Section**Band Cover**

1. Press to AM(MW) position.
2. Set the frequency display to 520 kHz (10 kHz channel step), or 522 kHz (9 kHz channel step).
3. Connect DC. VTVM. TP401 and TP402 (GND).
4. Adjust L222 so that the VTVM. shows 0.95 V.
5. And set the frequency display to 1710 kHz (10 kHz channel step), or 1611 kHz (9 kHz channel step).
6. Adjust C225 so that the DC. VTVM. reads 9.00 V for 1710 kHz, or 7.50 V for 1611 kHz.

Tracking and Sensitivity

Note: Be sure to perform this adjustment posterior to the LW tracking adjustment.

1. Connect the loop antenna. Also connect the RF generator to the antenna terminal on the rear panel.
2. Set the generator to 600 kHz (or 603 kHz) with 30 % modulation at 400 Hz.
3. Set the frequency display to 600 kHz, or 603 kHz.
4. Adjust the core of L221 to maximize the output.
5. Set the generator to 1400 kHz, or 1404 kHz.
6. Set the frequency display of the unit to 1400 kHz, or 1404 kHz.
7. Adjust C222 so that the output signal is maximized.
8. Repeat these adjustments (1 ~ 7) alternately until maximum sensitivity is obtained.


LW Section**Band Cover**

1. Press to LW position.
2. Set the frequency display to 153 kHz.
3. Connect a DC. VTVM. to TP401 and TP402 (GND).
4. Adjust L202 so that the VTVM. shows 1.10 V.
5. Set the frequency display to 360 kHz.
6. Adjust C205 so that the VTVM. reads 8.00 V.

Tracking and Sensitivity


1. Connect the loop antenna. Also connect the RF generator to the antenna terminal on the rear panel.
2. Set the generator to 164 kHz with 30 % modulation at 400 kHz.
3. Set the frequency display to 164 kHz.
4. Adjust the core of L201 to maximize the output.
5. Set the frequency generator to 353 kHz.
6. Set the frequency display of the unit to 353 kHz.
7. Adjust C202 so that the output signal is maximized.
8. Repeat these adjustments (1 ~ 7) alternately until maximum sensitivity is obtained.

5. Block Diagram

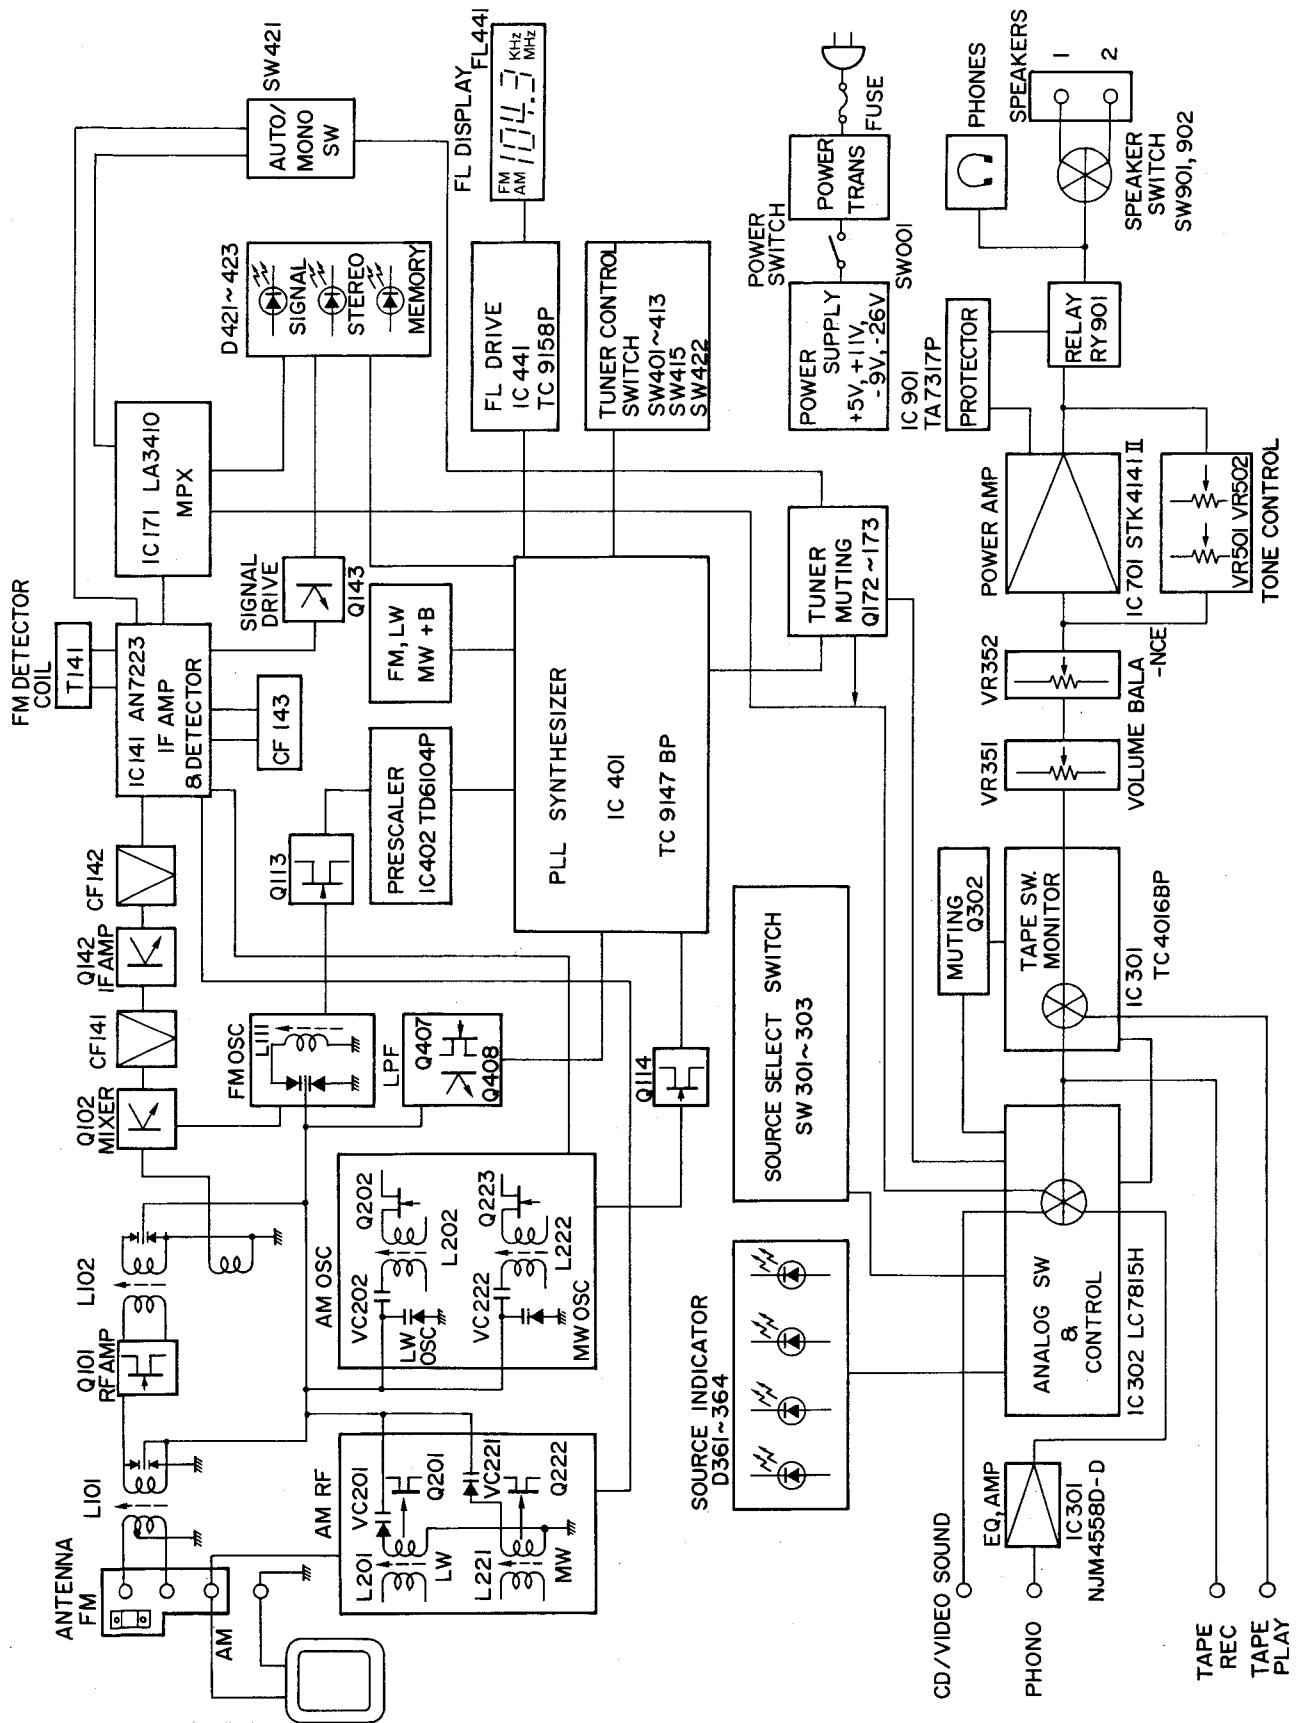

6,RX-111BK/RX-111LBK Schematic Diagram

6-(1) RX-111BK Tuner Section

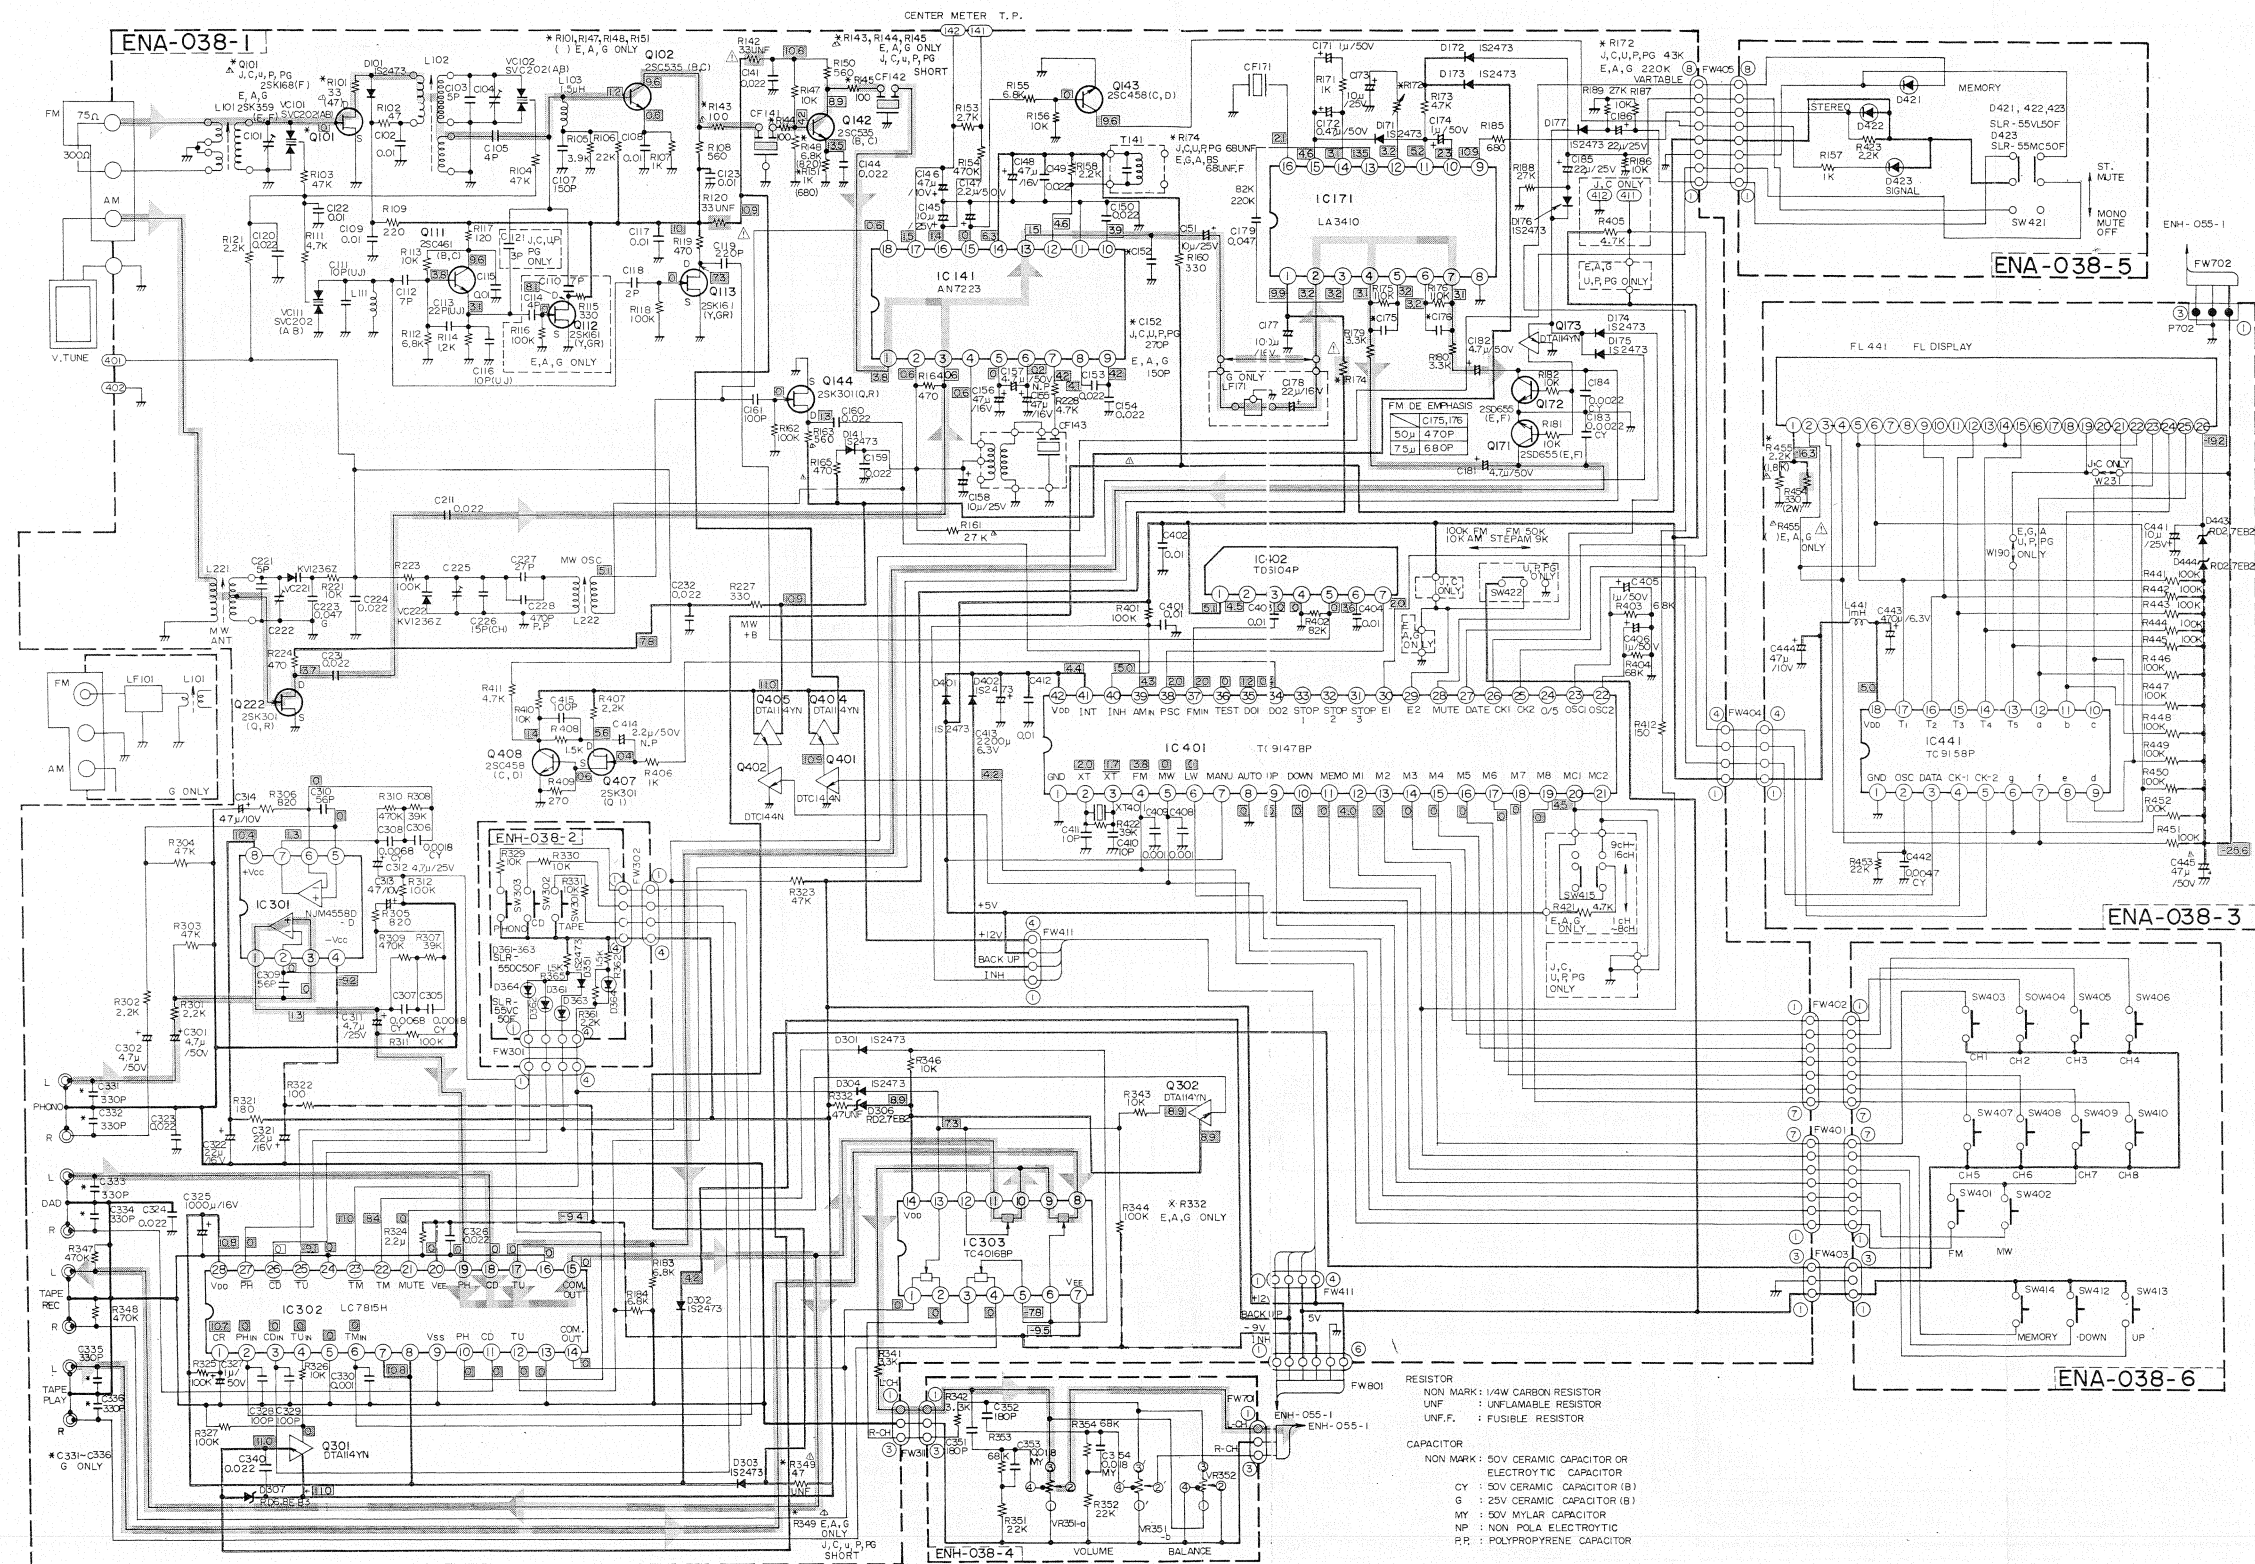


Notes:

- Notes:
1.  shows DC voltage to the chassis with no signal input.
 2.  indicates positive B power supply.
 3.  indicates negative B power supply.
 4.  indicates signal path.

5. When replacing the parts in the darkened area () and those marked with $\triangle$, be sure to use the designated parts to ensure safety.
6. This is the standard circuit diagram.
The design and contents are subject to change without notice.

6-(2) RX-111LBK Tuner Section

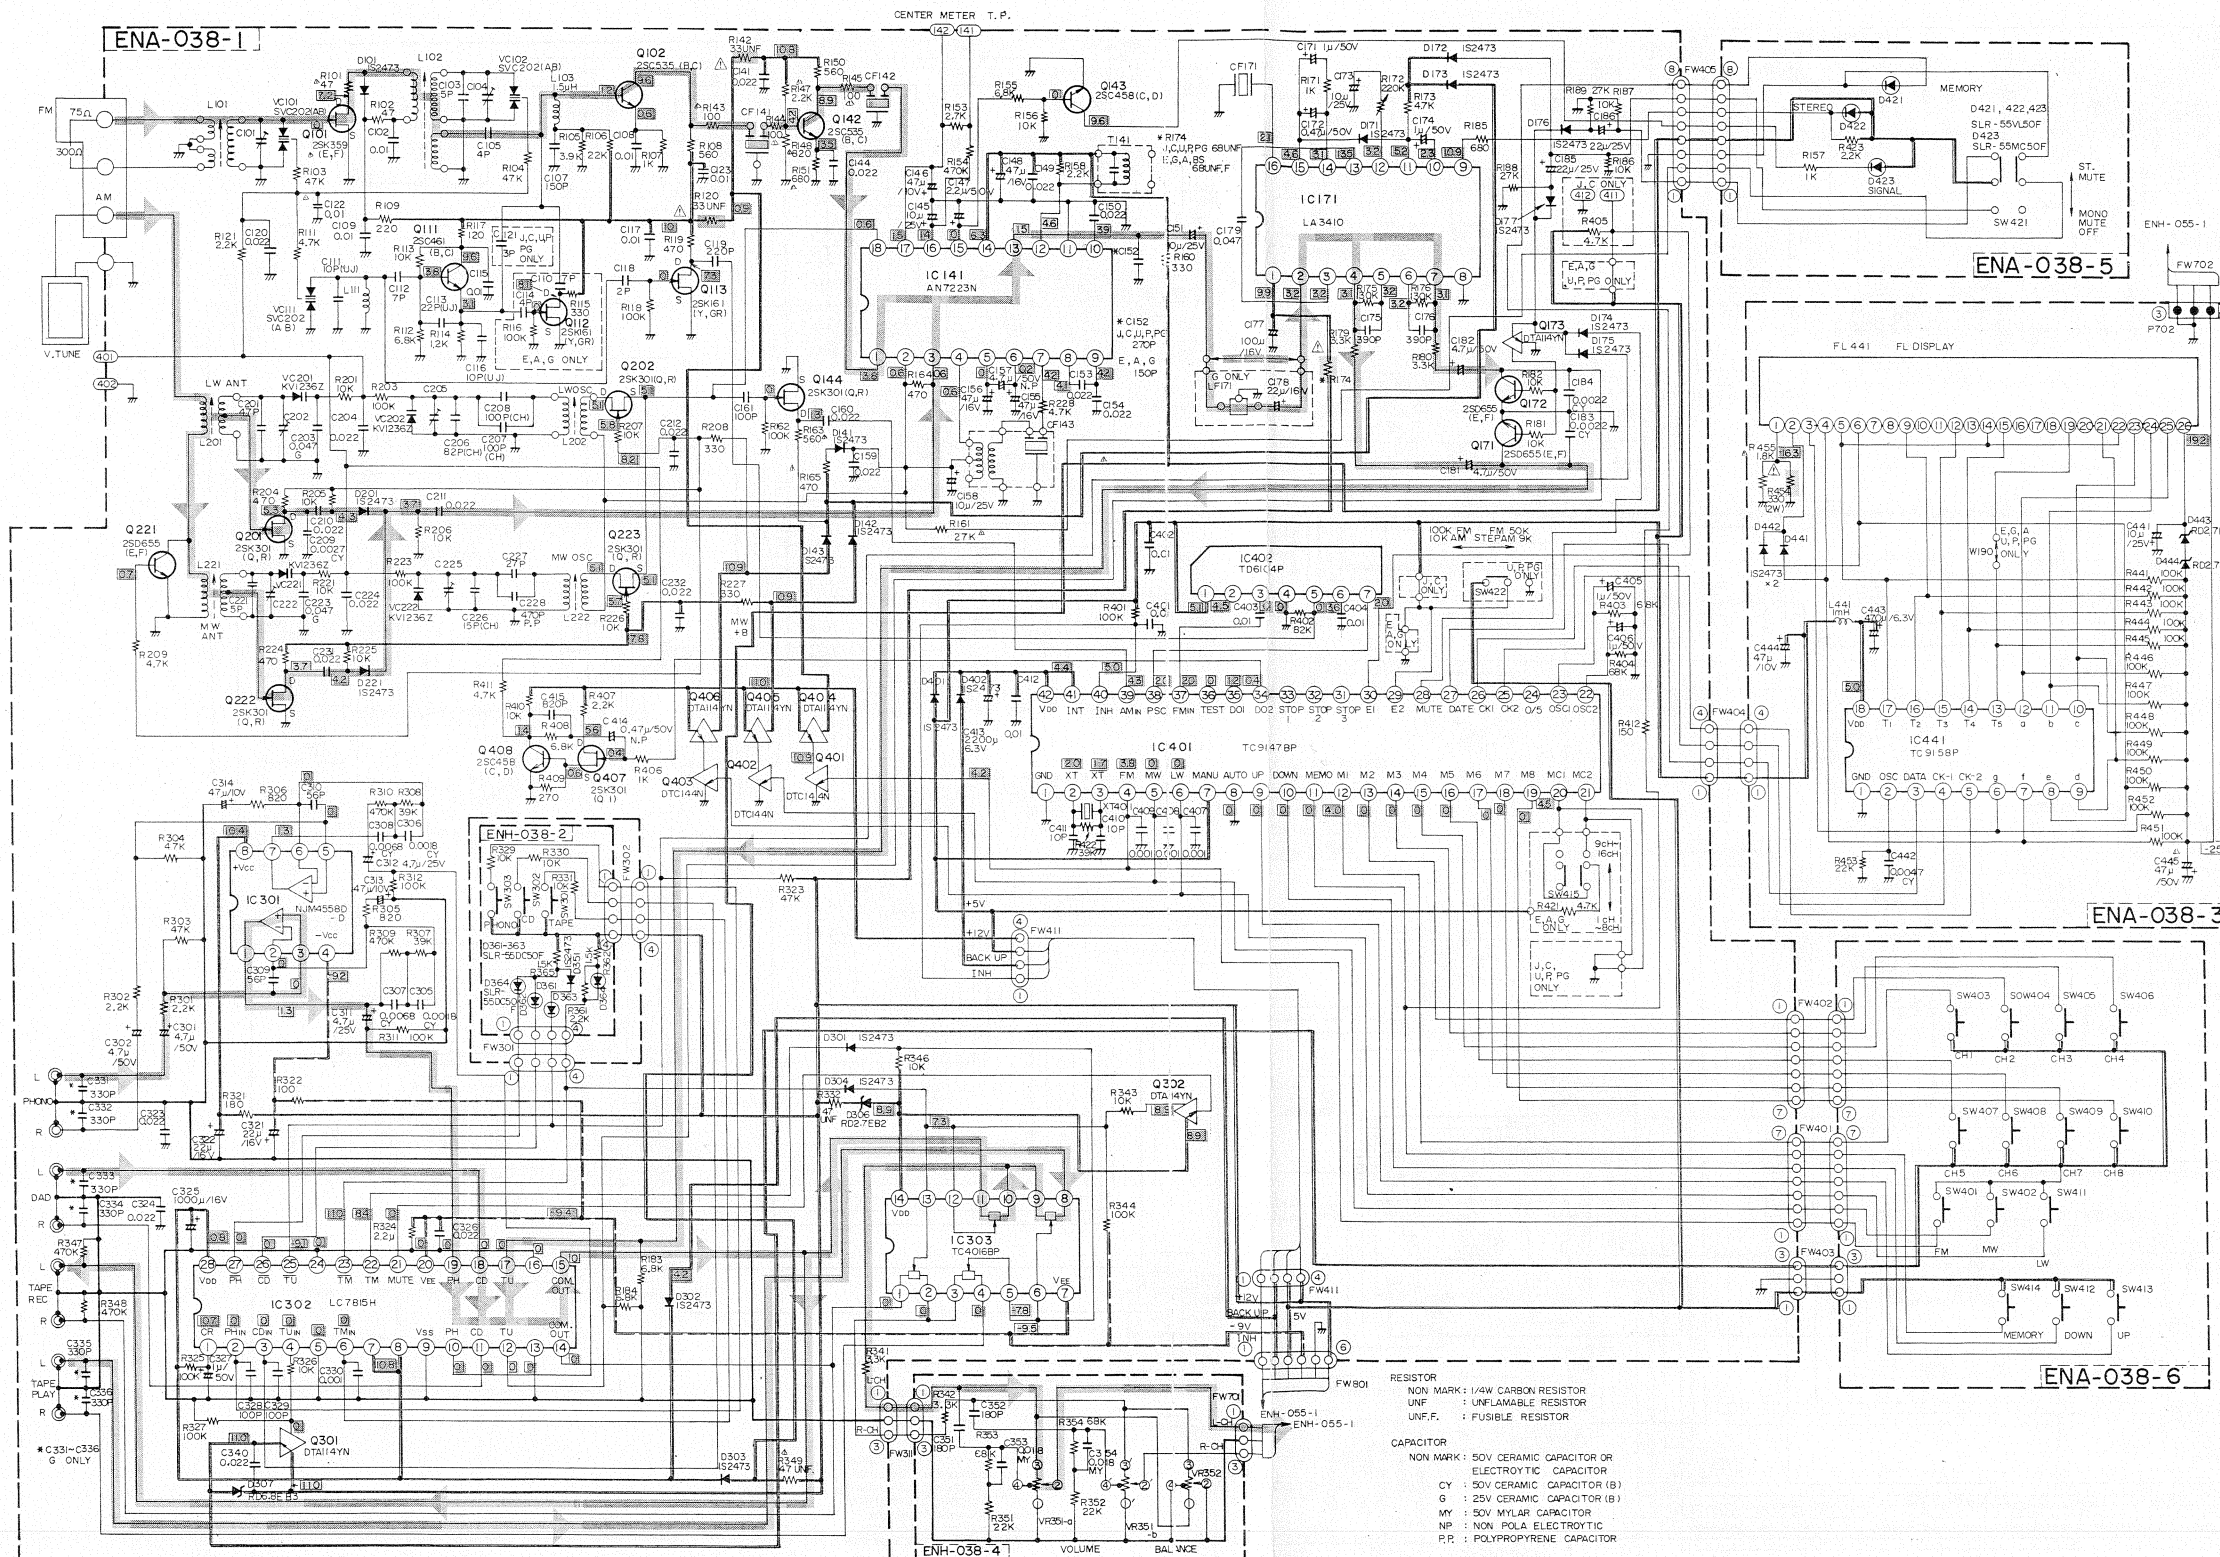


Notes:

1. shows DC voltage to the chassis with no signal input.
2. indicates positive B power supply.
3. indicates negative B power supply.
4. indicates signal path.

5. When replacing the parts in the darkened area () and those marked with , be sure to use the designated parts to ensure safety.
6. This is the standard circuit diagram.
The design and contents are subject to change without notice.

6-(3) RX-111BK/RX-111LBK Amplifier Section

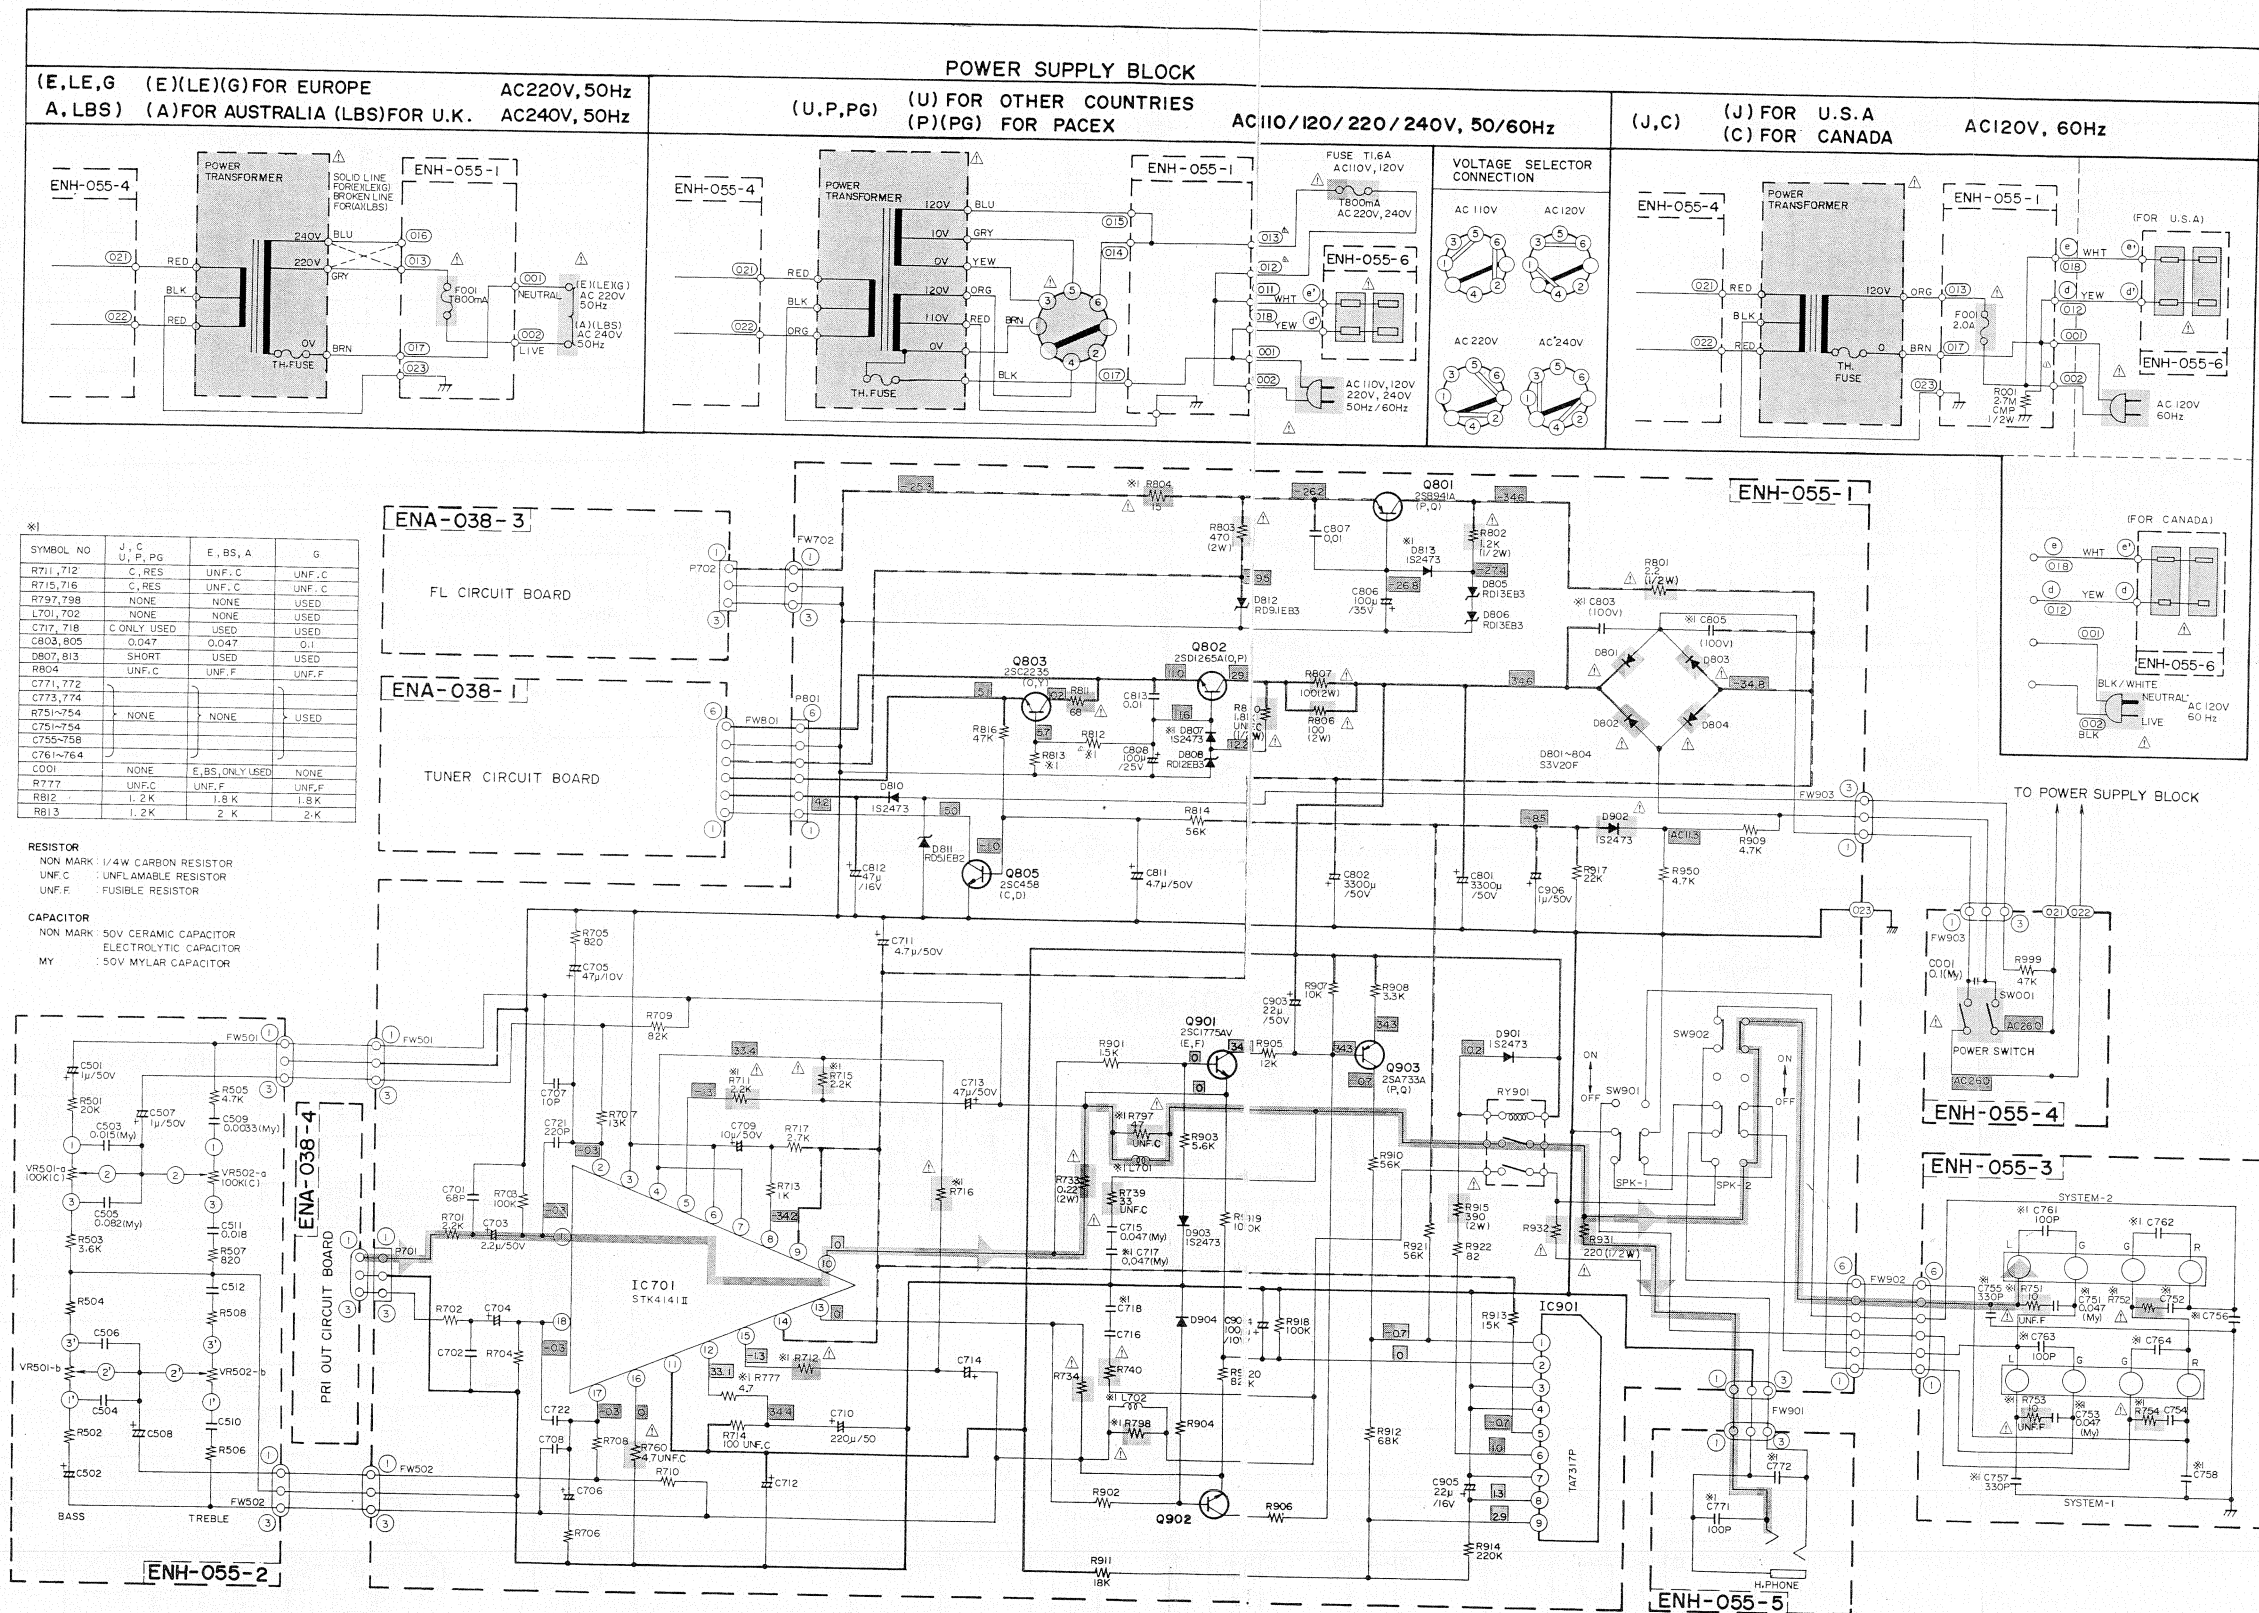

Notes:







1.  shows DC voltage to the chassis with no signal input.
2.  indicates positive B power supply.
3.  indicates negative B power supply.
4.  indicates signal path.

5. When replacing the parts in the darkened area () and those marked with Δ , be sure to use the designated parts to ensure safety.
6. This is the standard circuit diagram.
The design and contents are subject to change without notice.

RX-111BK
RX-111LBK

RX-111BK
RX-111LBK

6-(4) Internal Block Diagram of Major LSI ICs

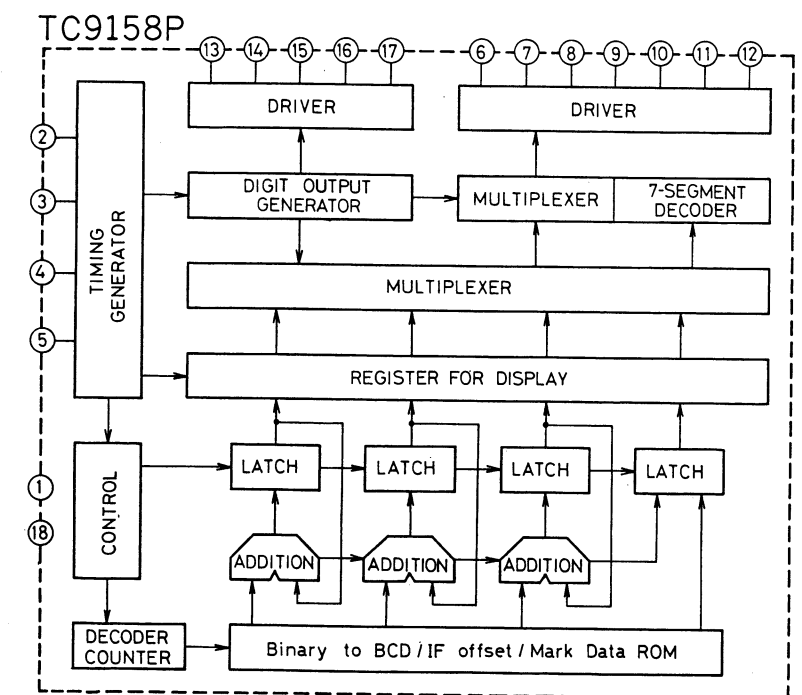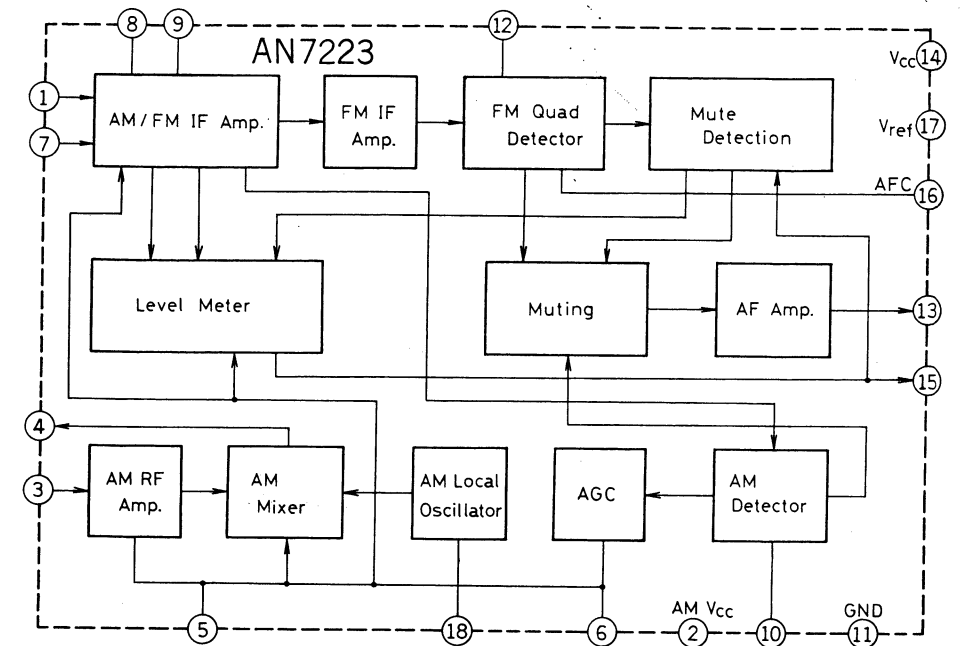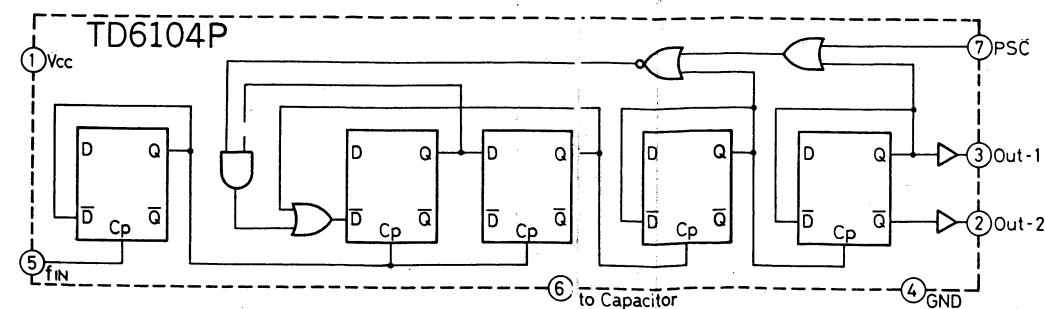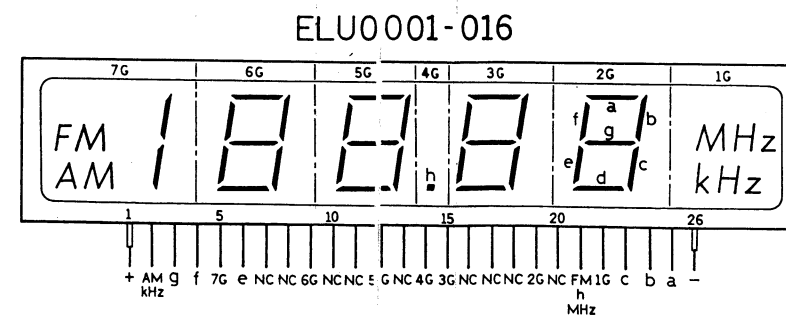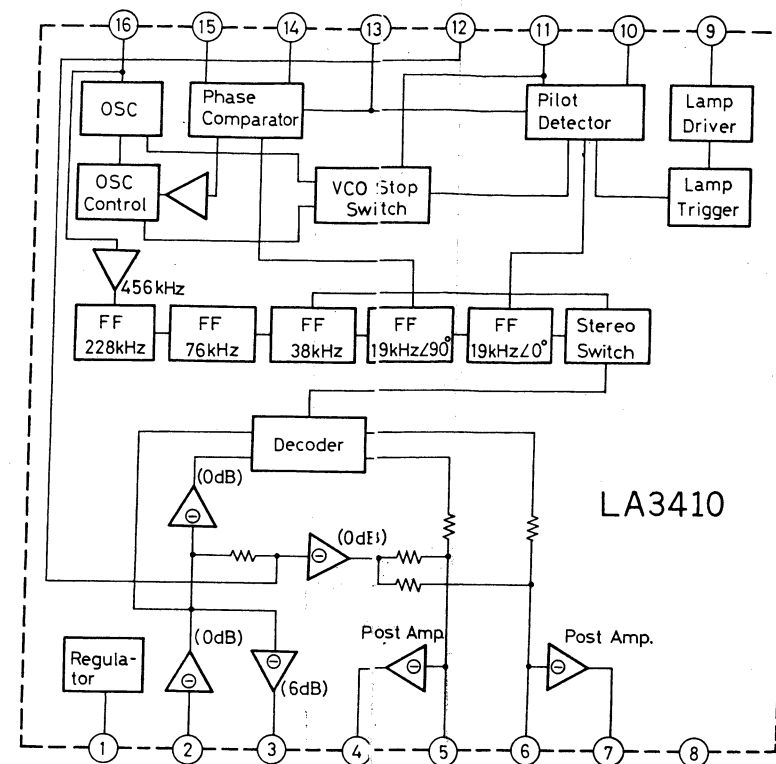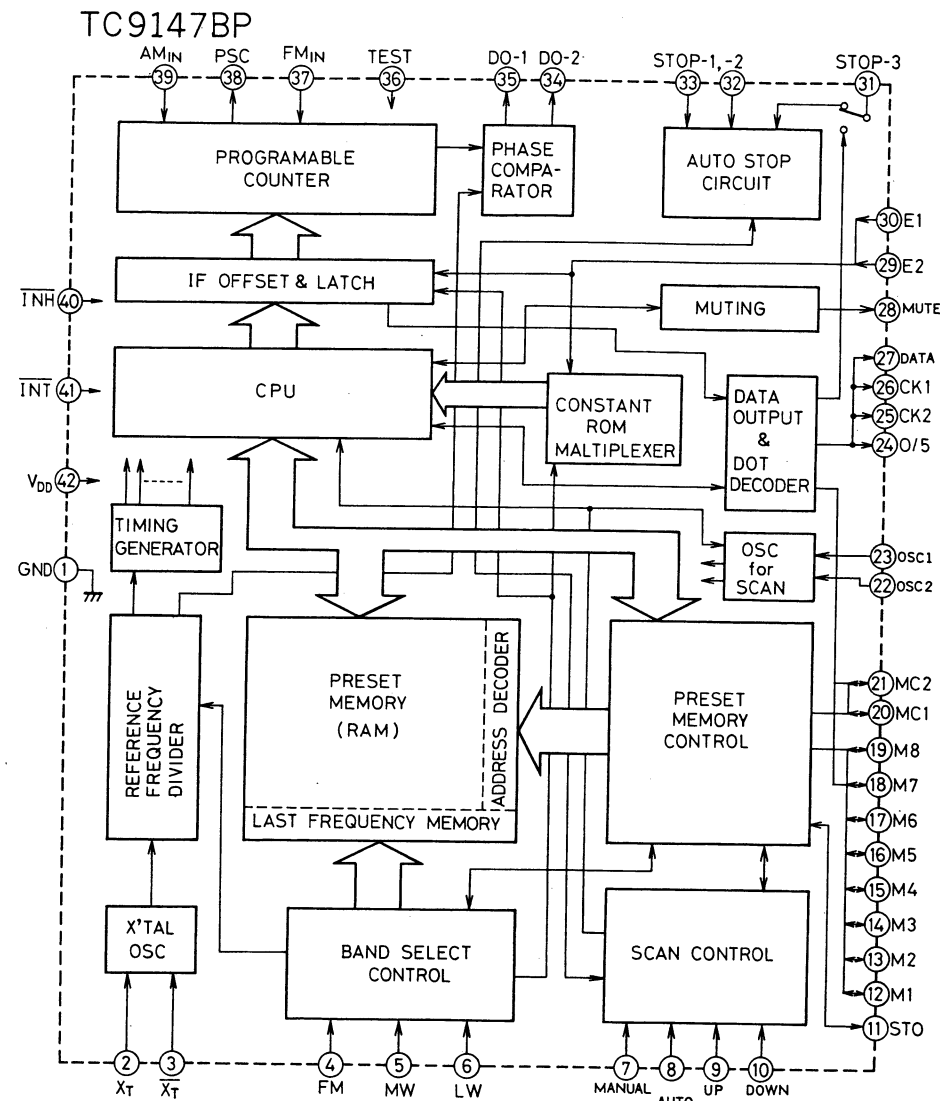


PARTS LIST

Contents


1. Main Parts Locations	2-2
1-(1) Top View	2-2
1-(2) Front View	2-2
1-(3) Rear View	2-2
2. Exploded View and Part Numbers	2-3
3. Printed Circuit Board Ass'y and Parts List	2-5
3-(1) ENA-038□ Tuner P.C. Board Ass'y	2-5
3-(2) ENH-055□ Audio P.C. Board Ass'y	2-10
4. Packing Materials and Part Numbers	2-13
5. Accessories List	2-13

1. Main Parts Loca


1-(1) Front View

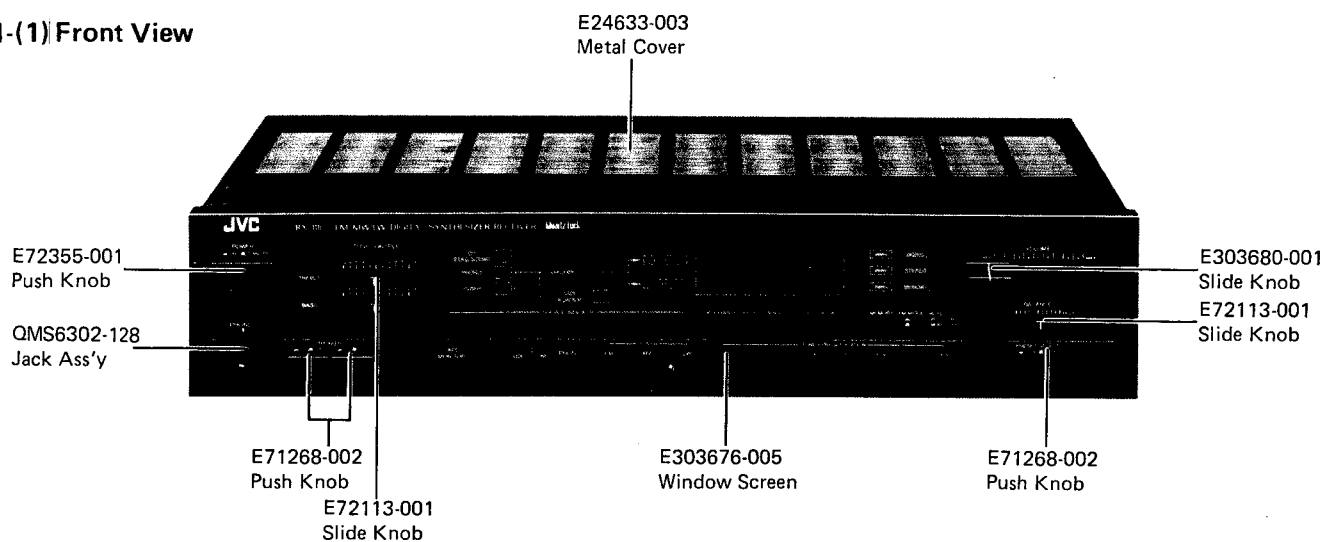


1-(2) Top View

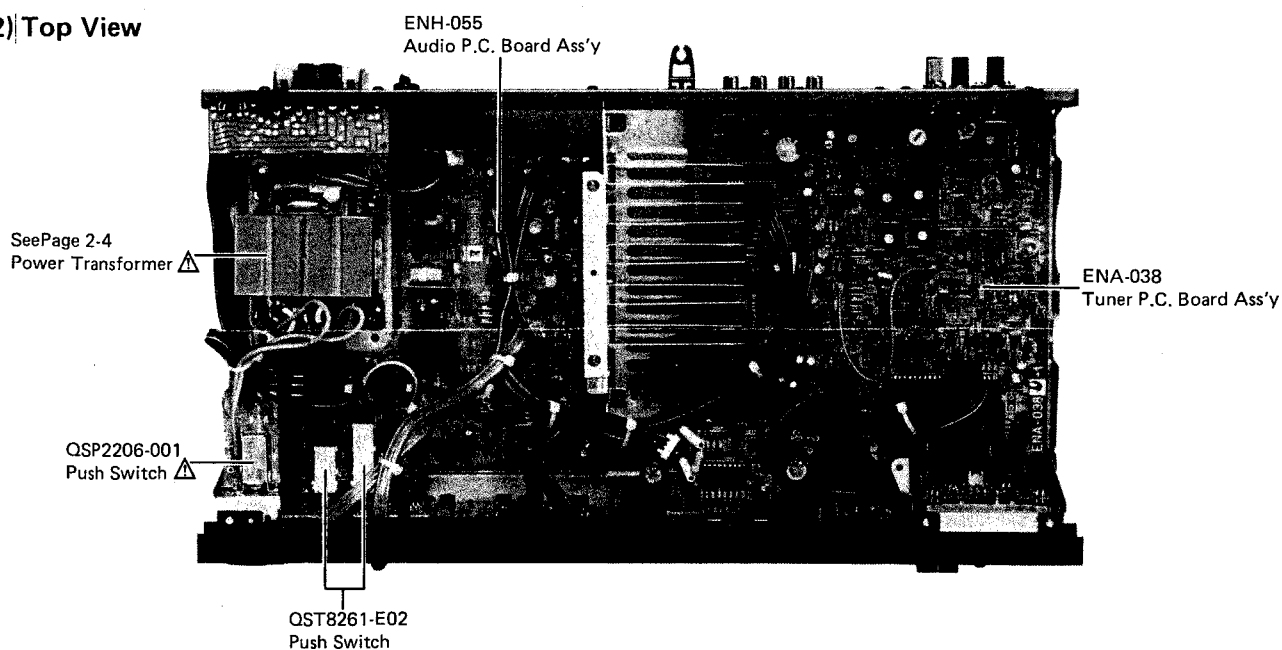

1-(3) Rear View

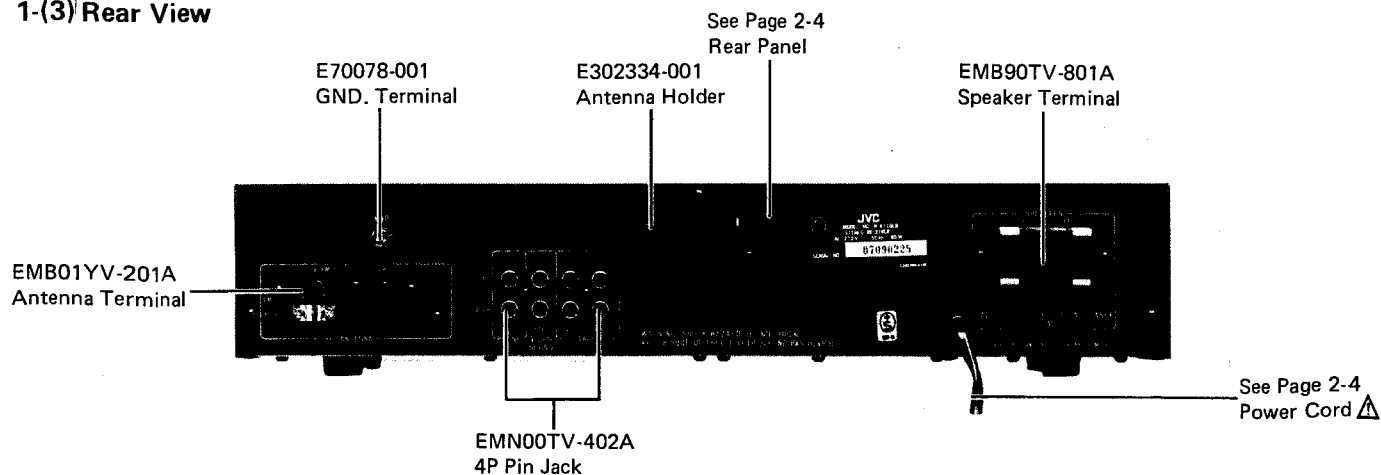

2. Exploded Views and Part Numbers

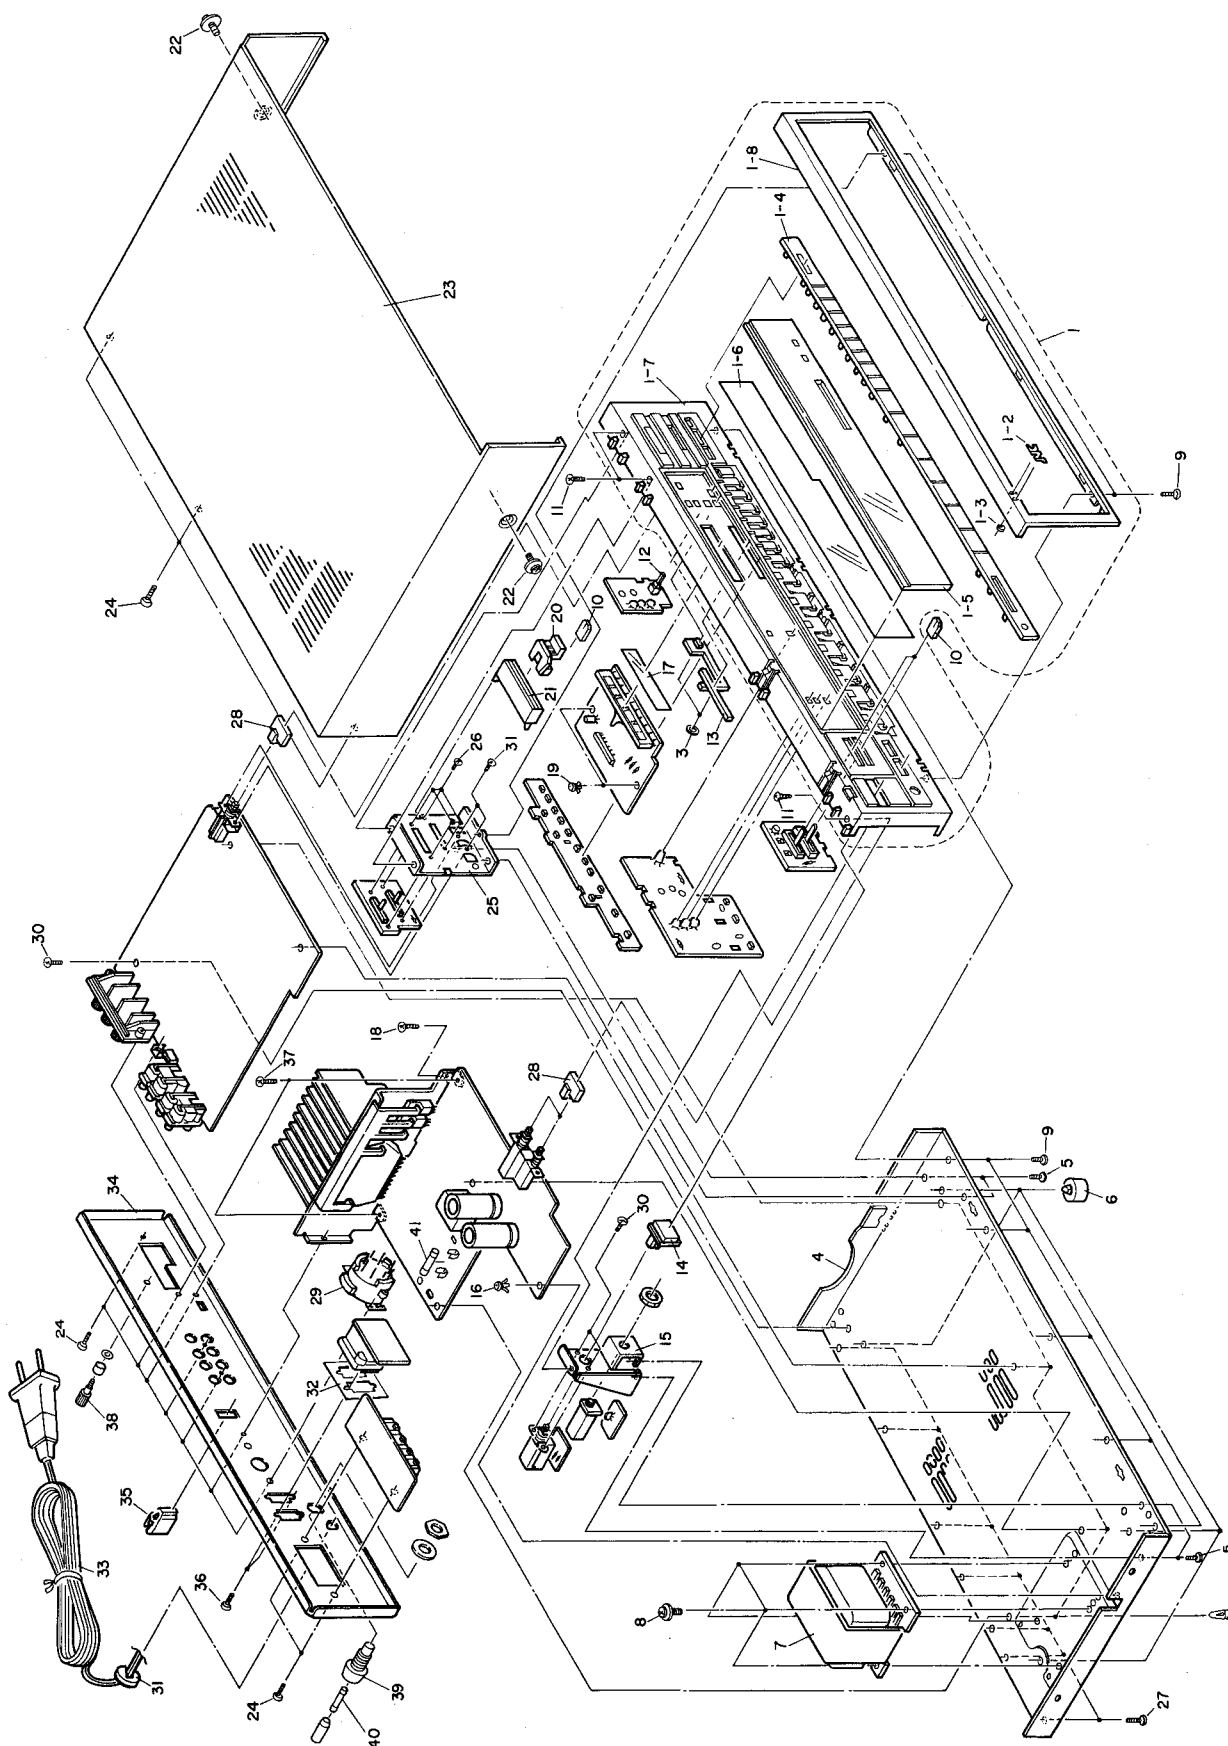

Item	Part Number	Part Name	Q'ty	Description	Areas
1	EFP-RX111BK	Front Panel Ass'y	1		Except LE, LBS
	EFP-RX111LBK	Front Panel Ass'y	1		LE, LBS
1-2	E72968-001	JVC Mark	1		
1-3	E60912-003	Speed Nut	1		
1-4	E24942-014	Front Plate	1		E, G, A
	E24942-015	Front Plate	1		LE, LBS
	E24942-016	Front Plate	1		J, C, U, P, PG
1-5	E303676-005	Window Screen	1		
1-6	E303678-005	Indicator Sheet	1		
1-7	E11083-003	Front Base	1		Except LE, LBS
	E11083-004	Front Base	1		LE, LBS
1-8	E24940-011	Front Panel	1		Except LE, LBS
	E24940-012	Front Panel	1		LE, LBS
2	E303216-003	Fastener	4		
3	E60912-003	Speed Nut	2		
4	E10949-005	Chassis Base	1		
5	SBSB3006N	Screw	4		
6	E301258-002	Foot	4		
7	ETP1070-16JA	Power Transformer	1		J
	ETP1070-16CA	Power Transformer	1		C
	ETP1070-16FA	Power Transformer	1		U, P, PG
	ETP1070-16EA	Power Transformer	1		E, G, A, LE
	ETP1070-16EABS	Power Transformer	1		LBS
8	E65389-002	Ass'y Screw	4		
9	SBSF3008M	Screw	7		
10	E72113-001	Slide Knob	3		
11	SBSB3008N	Screw	3		
12	E72089-001	Push Knob	1		
13	E72090-001	Push Knob	1		
14	E72355-001	Push Knob	1		
15	E72091-003	Bracket	1		
16	E48729-008	Plastic Rivet	1		
17	E70561-004	FL Screen	1		
18	SBST3006Z	Screw	1		
19	E48729-007	Plastic Rivet	2		
20	E303680-001	Slide Knob	1		
21	E303681-002	Volume Escutcheon	1		
22	E61660-004	Screw	4		
23	E24633-003	Metal Cover	1		
24	SBSB3008M	Screw	12		
25	E72097-001	Bracket	1		
26	E70053-001	Screw	4		
27	SBSB3006M	Screw	7		
28	E71268-002	Push Knob	2		
29	QSR0085-008U	Voltage Selector	1		U, P, PG
30	SBST3006Z	Screw	5		
31	QHS3876-162	Cord Stopper	1		Except LBS
	QHS3876-162BS	Cord Stopper	1		LBS
32	E69589-006	Spacer	1		J
33	QMP1340-200	Power Cord	1		J, C
	QMP3900-200	Power Cord	1		E, LE, G
	QMP2560-244	Power Cord	1		A
	QMP7600-200	Power Cord	1		U, P, PG
	QMP9017-008BS	Power Cord	1		LBS
34	E24944-010	Rear Panel	1		J, C
	E24944-011	Rear Panel	1		U, P, PG
	E24944-012	Rear Panel	1		E, LE, A, LBS
	E24944-013	Rear Panel	1		G
35	E302334-001	Antenna Holder	1		
36	SDSB3008M	Screw	2		J, C, U, P, PG
37	SBSB3006M	Screw	2		
38	E70078-001	GND. Terminal	1		
39	QMG0301-003	Fuse Holder	1		U, P, PG
40	QMF51A2-T1R6S	Fuse	1		P
	QMF51A2-R80S	Fuse	1		U, PG
41	QMF61U1-2R0	Fuse	1		J, C
	QMF51A2-R80S	Fuse	1		E, LE, A, G
	QMF51E2-R80SBS	Fuse	1		LBS

△ Safety parts

The Marks for Designated Areas

J U.S.A.
C Canada
A Australia

E, LE Europe
G West Germany
P, PG U.S. Military Market

LBS U.K.
U Other Countries

3. Printed Circuit Board Ass'y and Parts List

3-(1) ENA-038□ Tuner P. C. Board Ass'y


Note: ENA-038□ varies according to the areas employed. See note (1) when placing an order.

Note (1)

P.C. Board Ass'y	Designated Aseas
ENA-038 A	U.S.A. & Canada
ENA-038 B	U.S. Military & Other Countries
ENA-038 C	Europe & Australia
ENA-038 D	Europe & U.K. with LW
ENA-038 E	West Germany

Note (2)

The symbols (赤、黒、白 etc.) on P.C. Board surface are factory process only.

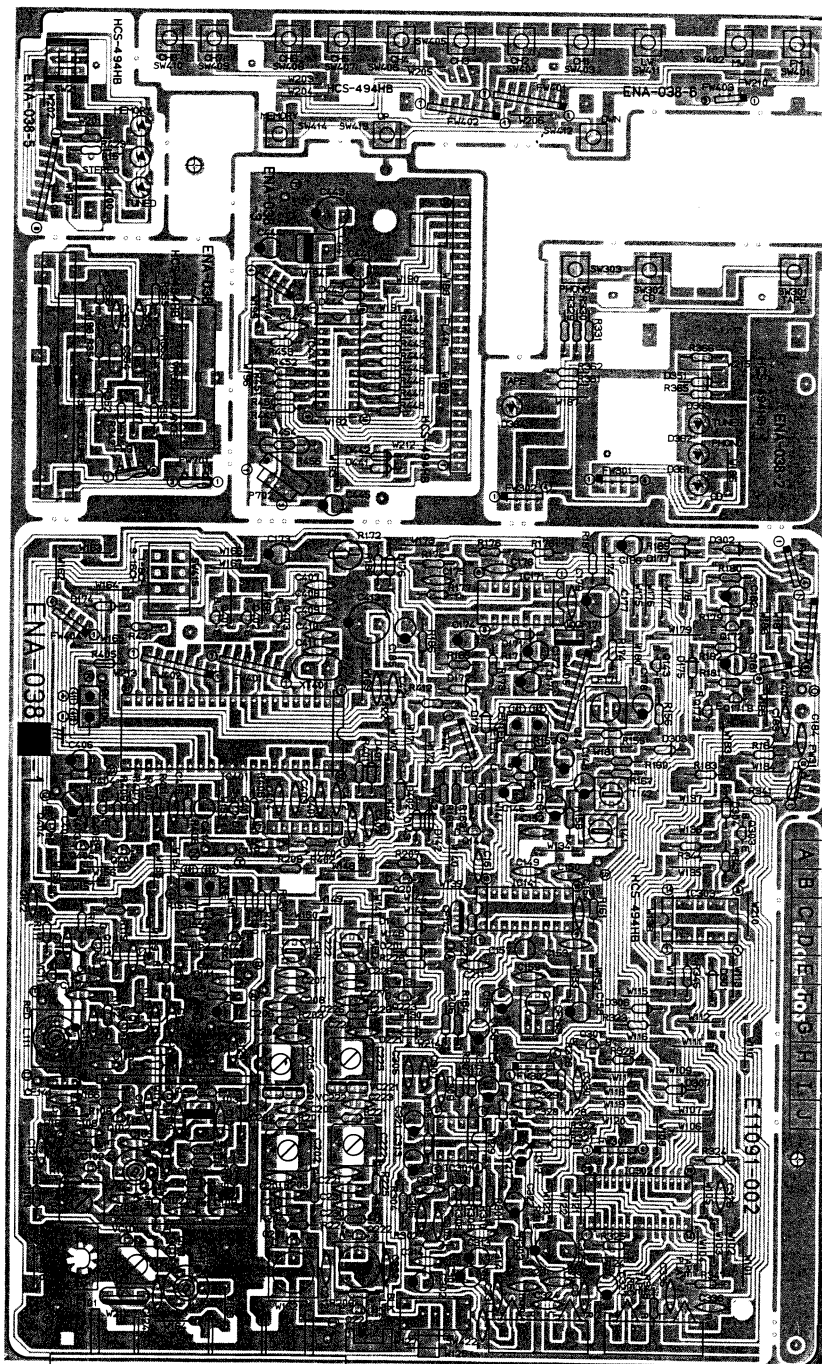

Transistors

ITEM	PART NUMBER	DESCRIPTION		AREA
		MAKER		
Q101	2SK168(F)	F.E.T	HITACHI	A
Q101	2SK168(F)	F.E.T	HITACHI	B
Q101	2SK359(E,F)	F.E.T	HITACHI	C
Q101	2SK359(E,F)	F.E.T	HITACHI	D
Q101	2SK359(E,F)	F.E.T	HITACHI	E
Q102	2SC535(B,C)	SILICON	HITACHI	
Q103	2SC461(C,D)	SILICON	HITACHI	E
Q111	2SC461(B,C)	SILICON	HITACHI	
Q112	2SK161(GR)	F.E.T	TOSHIBA	C
Q112	2SK161(GR)	F.E.T	TOSHIBA	D
Q112	2SK161(GR)	F.E.T	TOSHIBA	E
Q113	2SK161(GR)	F.E.T	TOSHIBA	
Q142	2SC535(B,C)	SILICON	HITACHI	
Q143	2SC458(C,D)	SILICON	HITACHI	
Q144	2SK301(Q,R)	F.E.T	MATSUSHITA	
Q171	2SD655(E,F)	SILICON	HITACHI	
Q172	2SD655(E,F)	SILICON	HITACHI	
Q173	DTA114YN	SILICON	ROHM	
Q201	2SK301(Q,R)	F.E.T	MATSUSHITA	D
Q202	2SK301(Q,R)	F.E.T	MATSUSHITA	D
Q221	2SD655(E,F)	SILICON	HITACHI	D
Q222	2SK301(Q,R)	F.E.T	MATSUSHITA	
Q223	2SK301(Q,R)	F.E.T	MATSUSHITA	D
Q301	DTA114YN	SILICON	ROHM	
Q302	DTA114YN	SILICON	ROHM	
Q401	DTC144EN	SILICON	ROHM	
Q402	DTC144EN	SILICON	ROHM	
Q403	DTC144EN	SILICON	ROHM	D
Q404	DTA114YN	SILICON	ROHM	
Q405	DTA114YN	SILICON	ROHM	
Q406	DTA114YN	SILICON	ROHM	D
Q407	2SK301(Q1)	F.E.T	MATSUSHITA	
Q408	2SC458(C,D)	SILICON	HITACHI	

ICs

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	IC141	AN7223	I.C.	MATSUSHITA	
	IC171	LA3410	I.C.	SANYO	
	IC301	NJM4558D-D	I.C.		
	IC302	LC7815H	I.C.	SANYO	
	IC303	TC4016BP	I.C.	TOSHIBA	
	IC401	TC9147BP	I.C.	TOSHIBA	
	IC402	TD6104P	I.C.	TOSHIBA	
	IC441	TC9158P	I.C.	TOSHIBA	

Diodes

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	D101	1SS108	SILICON	HITACHI	E
	D101	1S2473	SILICON	ROHM	A
	D101	1S2473	SILICON	ROHM	B
	D101	1S2473	SILICON	ROHM	C
	D101	1S2473	SILICON	ROHM	D
	D141	1S2473	SILICON	ROHM	D D
	D142	1S2473	SILICON	ROHM	
	D143	1S2473	SILICON	ROHM	
	D171	1S2473	SILICON	ROHM	
	D172	1S2473	SILICON	ROHM	
	D173	1S2473	SILICON	ROHM	
	D174	1S2473	SILICON	ROHM	
	D175	1S2473	SILICON	ROHM	
	D176	1S2473	SILICON	ROHM	
	D177	1S2473	SILICON	ROHM	
	D201	1S2473	SILICON	ROHM	
	D221	1S2473	SILICON	ROHM	
	D301	1S2473	SILICON	ROHM	D D
	D302	1S2473	SILICON	ROHM	
	D303	1S2473	SILICON	ROHM	
	D304	1S2473	SILICON	ROHM	
	D306	RD2.7EB2	ZENER	NEC	
	D307	RD6.8EB3	ZENER	NEC	
	D351		SILICON	ROHM	
	D361	SLR-55DC50F	L.E.D.	ROHM	

Diodes

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	D362	SLR-55DC50F	L.E.D.	ROHM	
	D363	SLR-55DC50F	L.E.D.	ROHM	
	D364	SLR-55VC50F	L.E.D.	ROHM	
	D401	1S2473	SILICON	ROHM	
	D402	1S2473	SILICON	ROHM	
	D421	SLR-55VC50F	L.E.D.	ROHM	
	D422	SLR-55VC50F	L.E.D.	ROHM	
	D423	SLR-55VC50F	L.E.D.	ROHM	
	D441	1S2473	SILICON	ROHM	D
	D442	1S2473	SILICON	ROHM	D
	D443	RD2.7EB2	ZENER	NEC	
	D444	RD2.7EB2	ZENER	NEC	
	VC101	SVC202(AB)	VALICAP	SANYO	
	VC102	SVC202(AB)	VALICAP	SANYO	
	VC111	SVC202(AB)	VALICAP	SANYO	
	VC201	KV1236Z	VALICAP	TOKO	D
	VC202	KV1236Z	VALICAP	TOKO	D
	VC221	KV1236Z	VALICAP	TOKO	
	VC222	KV1236Z	VALICAP	TOKO	

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION			AREA
	C100	QCS21HJ-3R0	3.0PF	50V	CERAMIC	C D E
	C100	QCS21HJ-3R0	3.0PF	50V	CERAMIC	
	C100	QCS21HJ-3R0	3.0PF	50V	CERAMIC	
	C101	QAT2001-001			TRIMMER	
	C102	QCF21HP-103	0.01MF	50V	CERAMIC	
	C103	QCS21HJ-5R0	5.0PF	50V	CERAMIC	
	C104	QAT2001-001			TRIMMER	
	C105	QCS21HJ-2R0	2.0PF	50V	CERAMIC	E A
	C105	QCS21HJ-4R0	4.0PF	50V	CERAMIC	
	C105	QCS21HJ-4R0	4.0PF	50V	CERAMIC	B C
	C105	QCS21HJ-4R0	4.0PF	50V	CERAMIC	
	C105	QCS21HJ-4R0	4.0PF	50V	CERAMIC	D
	C107	QCS21HJ-151	150PF	50V	CERAMIC	
	C108	QCF21HP-103	0.01MF	50V	CERAMIC	
	C109	QCF21HP-103	0.01MF	50V	CERAMIC	
	C110	QCS21HJ-7R0	7.0PF	50V	CERAMIC	C D E
	C110	QCS21HJ-7R0	7.0PF	50V	CERAMIC	
	C110	QCS21HJ-7R0	7.0PF	50V	CERAMIC	
	C111	QCT26UJ-100	10PF	50V	CERAMIC	
	C112	QCS21HJ-7R0	7.0PF	50V	CERAMIC	
	C113	QCT26UJ-220	22PF	50V	CERAMIC	
	C114	QCS21HJ-4R0	4.0PF	50V	CERAMIC	C D
	C114	QCS21HJ-4R0	4.0PF	50V	CERAMIC	
	C114	QCS21HJ-4R0	4.0PF	50V	CERAMIC	E
	C115	QCF21HP-103	0.01MF	50V	CERAMIC	
	C116	QCT26UJ-100	10PF	50V	CERAMIC	
	C117	QCF21HP-103	0.01MF	50V	CERAMIC	
	C118	QCS21HJ-2R0	2.0PF	50V	CERAMIC	
	C119	QCS21HJ-221	220PF	50V	CERAMIC	
	C120	QCF21HP-223	0.022MF	50V	CERAMIC	
	C121	QCS21HJ-3R0	3.0PF	50V	CERAMIC	A B
	C121	QCS21HJ-3R0	3.0PF	50V	CERAMIC	
	C122	QCF21HP-103	0.01MF	50V	CERAMIC	
	C123	QCF21HP-103	0.01MF	50V	CERAMIC	
	C124	QET51EM-106	10MF	25V	ELECTRO	E E
	C131	QETB1EM-106	10MF	25V	ELECTRO	
	C141	QCF21HP-223	0.022MF	50V	CERAMIC	
	C144	QCF21HP-223	0.022MF	50V	CERAMIC	
	C145	QET51EM-106	10MF	25V	ELECTRO	
	C146	QET51AM-476	47MF	10V	ELECTRO	
	C147	QET51HM-225	2.2MF	50V	ELECTRO	
	C148	QET51CM-476	47MF	16V	ELECTRO	
	C149	QCF21HP-223	0.022MF	50V	CERAMIC	
	C150	QCF21HP-223	0.022MF	50V	CERAMIC	
	C151	QET51EM-106	10MF	25V	ELECTRO	
	C152	QCS21HJ-151	150PF	50V	CERAMIC	C D
	C152	QCS21HJ-151	150PF	50V	CERAMIC	
	C152	QCS21HJ-151	150PF	50V	CERAMIC	E A
	C152	QCS21HJ-271	270PF	50V	CERAMIC	
	C152	QCS21HJ-271	270PF	50V	CERAMIC	B
	C153	QCF21HP-223	0.022MF	50V	CERAMIC	
	C154	QCF21HP-223	0.022MF	50V	CERAMIC	
	C155	QET51CM-476	47MF	16V	ELECTRO	
	C156	QET51CM-476	47MF	16V	ELECTRO	
	C157	QEN51HM-475	4.7MF	50V	NON POLE	

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C158	QET51EM-106	10MF 25V ELECTRO	
C159	QCF21HP-223	0.022MF 50V CERAMIC	
C160	QCF21HP-223	0.022MF 50V CERAMIC	
C161	QCS21HJ-101	100PF 50V CERAMIC	
C171	QET51HM-105	1MF 50V ELECTRO	
C172	QET51HM-474	0.47MF 50V ELECTRO	
C173	QET51EM-106	10MF 25V ELECTRO	
C174	QET51HM-105	1MF 50V ELECTRO	
C175	QCS21HJ-391	390PF 50V CERAMIC	D
C175	QCS21HJ-471	470PF 50V CERAMIC	C
C175	QCS21HJ-471	470PF 50V CERAMIC	E
C175	QCS21HJ-681	680PF 50V CERAMIC	A
C175	QCS21HJ-681	680PF 50V CERAMIC	B
C176	QCS21HJ-391	390PF 50V CERAMIC	D
C176	QCS21HJ-471	470PF 50V CERAMIC	C
C176	QCS21HJ-471	470PF 50V CERAMIC	E
C176	QCS21HJ-681	680PF 50V CERAMIC	A
C176	QCS21HJ-681	680PF 50V CERAMIC	B
C177	QET51CM-107	100MF 16V ELECTRO	
C178	QET51CM-226	22MF 16V ELECTRO	E
C179	QCF21HP-473	0.047MF 50V CERAMIC	
C181	QET51HM-475	4.7MF 50V ELECTRO	
C182	QET51HM-475	4.7MF 50V ELECTRO	
C183	QCY21HK-222	2200PF 50V CERAMIC	
C184	QCY21HK-222	2200PF 50V CERAMIC	
C185	QET51EM-226	22MF 25V ELECTRO	
C186	QET51EM-226	22MF 25V ELECTRO	
C201	QCS21HJ-470	47PF 50V CERAMIC	D
C202	QAT2001-005	50V TRIMMER	D
C203	QCC21EM-473	0.047MF 25V CERAMIC	D
C204	QCF21HP-223	0.022MF 50V CERAMIC	D
C205	QAT2001-005	50V TRIMMER	D
C206	QCT26CH-820	82PF 50V CERAMIC	D
C207	QCT26CH-101	100PF 50V CERAMIC	D
C208	QCT26CH-101	100PF 50V CERAMIC	D
C209	QCY21HK-272	2700PF 50V CERAMIC	D
C210	QCF21HP-223	0.022MF 50V CERAMIC	D
C211	QCF21HP-223	0.022MF 50V CERAMIC	
C212	QCF21HP-223	0.022MF 50V CERAMIC	D
C221	QCS21HJ-5R0	5.0PF 50V CERAMIC	
C222	QAT2001-005	50V TRIMMER	
C223	QCC21EM-473	0.047MF 25V CERAMIC	
C224	QCF21HP-223	0.022MF 50V CERAMIC	
C225	QAT2001-005	50V TRIMMER	
C226	QCT26CH-150	15PF 50V CERAMIC	
C227	QCS21HJ-270	27PF 50V CERAMIC	
C228	QFP81HJ-471	470PF 50V POLY	
C231	QCF21HP-223	0.022MF 50V CERAMIC	
C232	QCF21HP-223	0.022MF 50V CERAMIC	
C301	QET51HM-475	4.7MF 50V ELECTRO	
C302	QET51HM-475	4.7MF 50V ELECTRO	
C305	QCY21HK-182	1800PF 50V CERAMIC	
C306	QCY21HK-182	1800PF 50V CERAMIC	
C307	QCY21HK-682	6800PF 50V CERAMIC	
C308	QCY21HK-682	6800PF 50V CERAMIC	
C309	QCS21HJ-331	330PF 50V CERAMIC	E
C309	QCS21HJ-560	56PF 50V CERAMIC	A
C309	QCS21HJ-560	56PF 50V CERAMIC	B
C309	QCS21HJ-560	56PF 50V CERAMIC	C
C309	QCS21HJ-560	56PF 50V CERAMIC	D
C310	QCS21HJ-331	330PF 50V CERAMIC	E
C310	QCS21HJ-560	56PF 50V CERAMIC	A
C310	QCS21HJ-560	56PF 50V CERAMIC	B
C310	QCS21HJ-560	56PF 50V CERAMIC	C
C310	QCS21HJ-560	56PF 50V CERAMIC	D
C311	QET51HM-475	4.7MF 50V ELECTRO	
C312	QET51HM-475	4.7MF 50V ELECTRO	
C313	QET51AM-476	47MF 10V ELECTRO	
C314	QET51AM-476	47MF 10V ELECTRO	
C315	QCS21HJ-221	220PF 50V CERAMIC	E
C316	QCS21HJ-221	220PF 50V CERAMIC	E
C321	QET51CM-226	22MF 16V ELECTRO	
C322	QET51CM-226	22MF 16V ELECTRO	
C323	QCF21HP-223	0.022MF 50V CERAMIC	
C324	QCF21HP-223	0.022MF 50V CERAMIC	
C325	QET51CM-108	1000MF 16V ELECTRO	
C326	QCF21HP-223	0.022MF 50V CERAMIC	
C327	QET51HM-105	1MF 50V ELECTRO	
C328	QCS21HJ-101	100PF 50V CERAMIC	
C329	QCS21HJ-101	100PF 50V CERAMIC	
C330	QCF21HP-102	1000PF 50V CERAMIC	
C331	QCS21HJ-331	330PF 50V CERAMIC	E
C332	QCS21HJ-331	330PF 50V CERAMIC	E
C333	QCS21HJ-561	560PF 50V CERAMIC	E
C334	QCS21HJ-561	560PF 50V CERAMIC	E

Capacitors

ITEM	PART NUMBER	DESCRIPTION	AREA
C335	QCS21HJ-561	560PF 50V CERAMIC	E
C336	QCS21HJ-561	560PF 50V CERAMIC	E
C340	QCF21HP-223	0.022MF 50V CERAMIC	
C351	QCS21HJ-181	180PF 50V CERAMIC	
C352	QCS21HJ-181	180PF 50V CERAMIC	
C353	QFN81HK-183	0.018MF 50V MYLAR	
C354	QFN81HK-183	0.018MF 50V MYLAR	
C401	QCF21HP-103	0.01MF 50V CERAMIC	
C402	QCF21HP-103	0.01MF 50V CERAMIC	
C403	QCF21HP-103	0.01MF 50V CERAMIC	
C404	QCF21HP-103	0.01MF 50V CERAMIC	
C405	QET51HM-105	1MF 50V ELECTRO	
C406	QET51HM-105	1MF 50V ELECTRO	
C407	QCF21HP-102	1000PF 50V CERAMIC	D
C408	QCF21HP-102	1000PF 50V CERAMIC	
C409	QCF21HP-102	1000PF 50V CERAMIC	
C410	QCS21HJ-100	10PF 50V CERAMIC	
C411	QCS21HJ-100	10PF 50V CERAMIC	
C412	QCF21HP-103	0.01MF 50V CERAMIC	
C413	QET50JM-228	2200MF 6.3V ELECTRO	
C414	QEN51HM-225	2.2MF 50V NON POLE	A
C414	QEN51HM-225	2.2MF 50V NON POLE	B
C414	QEN51HM-225	2.2MF 50V NON POLE	C
C414	QEN51HM-225	2.2MF 50V NON POLE	E
C414	QEN51HM-474	0.47MF 50V NON POLE	D
C415	QCS21HJ-101	100PF 50V CERAMIC	A
C415	QCS21HJ-101	100PF 50V CERAMIC	B
C415	QCS21HJ-101	100PF 50V CERAMIC	C
C415	QCS21HJ-101	100PF 50V CERAMIC	E
C415	QCY21HK-821	820PF 50V CERAMIC	D
C441	QET51EM-106	10MF 25V ELECTRO	
C442	QCF21HP-472	4700PF 50V CERAMIC	
C443	QET50JM-477	470MF 6.3V ELECTRO	
C444	QET51AM-476	47MF 10V ELECTRO	
C445	QET51HM-476	47MF 50V ELECTRO	

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R101	QRD148J-330S	33 1/4W CARBON	A
R101	QRD148J-330S	33 1/4W CARBON	B
R101	QRD148J-470S	47 1/4W CARBON	C
R101	QRD148J-470S	47 1/4W CARBON	D
R101	QRD148J-470S	47 1/4W CARBON	E
R102	QRD148J-220S	22 1/4W CARBON	A
R102	QRD148J-220S	22 1/4W CARBON	B
R102	QRD148J-220S	22 1/4W CARBON	C
R102	QRD148J-220S	22 1/4W CARBON	D
R102	QRD148J-220S	22 1/4W CARBON	E
R102	QRD148J-8R2S	8.2 1/4W CARBON	
R103	QRD148J-473S	47K 1/4W CARBON	
R104	QRD148J-473S	47K 1/4W CARBON	
R105	QRD148J-392S	3.9K 1/4W CARBON	A
R105	QRD148J-392S	3.9K 1/4W CARBON	B
R105	QRD148J-392S	3.9K 1/4W CARBON	C
R105	QRD148J-392S	3.9K 1/4W CARBON	D
R105	QRD148J-472S	4.7K 1/4W CARBON	E
R106	QRD148J-223S	22K 1/4W CARBON	A
R106	QRD148J-223S	22K 1/4W CARBON	B
R106	QRD148J-223S	22K 1/4W CARBON	C
R106	QRD148J-223S	22K 1/4W CARBON	D
R106	QRD148J-223S	22K 1/4W CARBON	E
R106	QRD148J-333S	33K 1/4W CARBON	
R107	QRD148J-102S	1K 1/4W CARBON	
R108	QRD148J-102S	1K 1/4W CARBON	E
R108	QRD148J-561S	560 1/4W CARBON	A
R108	QRD148J-561S	560 1/4W CARBON	B
R108	QRD148J-561S	560 1/4W CARBON	C
R108	QRD148J-561S	560 1/4W CARBON	D
R109	QRD148J-221S	220 1/4W CARBON	
R111	QRD148J-472S	4.7K 1/4W CARBON	
R112	QRD148J-682S	6.8K 1/4W CARBON	A
R112	QRD148J-682S	6.8K 1/4W CARBON	B
R112	QRD148J-682S	6.8K 1/4W CARBON	C
R112	QRD148J-682S	6.8K 1/4W CARBON	D
R112	QRD148J-822S	8.2K 1/4W CARBON	E
R113	QRD148J-103S	10K 1/4W CARBON	
R114	QRD148J-122S	1.2K 1/4W CARBON	
R115	QRD148J-331S	330 1/4W CARBON	C
R115	QRD148J-331S	330 1/4W CARBON	D
R115	QRD148J-331S	330 1/4W CARBON	E

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R116	QRD148J-104S	100K 1/4W CARBON	C
R116	QRD148J-104S	100K 1/4W CARBON	D
R116	QRD148J-104S	100K 1/4W CARBON	E
R117	QRD148J-121S	120 1/4W CARBON	
R118	QRD148J-104S	100K 1/4W CARBON	
R119	QRD148J-471S	470 1/4W CARBON	
R120	QRD145J-330S	33 1/4W UNF. CARBON	
R121	QRD148J-222S	2.2K 1/4W CARBON	
R131	QRD148J-332S	3.3K 1/4W CARBON	
R142	QRD145J-330S	33 1/4W UNF. CARBON	
R143	QRD148J-101S	100 1/4W CARBON	C
R143	QRD148J-101S	100 1/4W CARBON	D
R143	QRD148J-101S	100 1/4W CARBON	E
R144	QRD148J-101S	100 1/4W CARBON	C
R144	QRD148J-101S	100 1/4W CARBON	D
R144	QRD148J-101S	100 1/4W CARBON	E
R145	QRD148J-101S	100 1/4W CARBON	C
R145	QRD148J-101S	100 1/4W CARBON	D
R145	QRD148J-101S	100 1/4W CARBON	E
R147	QRD148J-103S	10K 1/4W CARBON	A
R147	QRD148J-103S	10K 1/4W CARBON	B
R147	QRD148J-222S	2.2K 1/4W CARBON	C
R147	QRD148J-222S	2.2K 1/4W CARBON	D
R147	QRD148J-222S	2.2K 1/4W CARBON	E
R148	QRD148J-682S	6.8K 1/4W CARBON	A
R148	QRD148J-682S	6.8K 1/4W CARBON	B
R148	QRD148J-821S	820 1/4W CARBON	C
R148	QRD148J-821S	820 1/4W CARBON	D
R148	QRD148J-821S	820 1/4W CARBON	E
R150	QRD148J-561S	560 1/4W CARBON	
R151	QRD148J-102S	1K 1/4W CARBON	A
R151	QRD148J-102S	1K 1/4W CARBON	B
R151	QRD148J-681S	680 1/4W CARBON	C
R151	QRD148J-681S	680 1/4W CARBON	D
R151	QRD148J-681S	680 1/4W CARBON	E
R153	QRD148J-272S	2.7K 1/4W CARBON	
R154	QRD148J-474S	470K 1/4W CARBON	
R155	QRD148J-682S	6.8K 1/4W CARBON	
R156	QRD148J-103S	10K 1/4W CARBON	
R157	QRD148J-102S	1K 1/4W CARBON	
R158	QRD148J-222S	2.2K 1/4W CARBON	
R160	QRD148J-331S	330 1/4W CARBON	
R161	QRD148J-273S	27K 1/4W CARBON	
R162	QRD148J-104S	100K 1/4W CARBON	
R163	QRD148J-561S	560 1/4W CARBON	
R164	QRD148J-471S	470 1/4W CARBON	
R165	QRD148J-471S	470 1/4W CARBON	
R171	QRD148J-102S	1K 1/4W CARBON	
R172	QRD148J-433S	43K 1/4W CARBON	A
R172	QRD148J-433S	43K 1/4W CARBON	B
R172	QVZ3518-224	VARIABLE	C
R172	QVZ3518-224	VARIABLE	D
R172	QVZ3518-224	VARIABLE	E
R173	QRD148J-472S	4.7K 1/4W CARBON	
R174	QRD145J-680S	68 1/4W UNF. CARBON	A
R174	QRD145J-680S	68 1/4W UNF. CARBON	B
R174	QRZ0062-680	68 1/4W FUSIBLE	C
R174	QRZ0062-680	68 1/4W FUSIBLE	D
R174	QRZ0062-680	68 1/4W FUSIBLE	E
R175	QRD148J-114S	110K 1/4W CARBON	A
R175	QRD148J-114S	110K 1/4W CARBON	B
R175	QRD148J-114S	110K 1/4W CARBON	C
R175	QRD148J-114S	110K 1/4W CARBON	E
R175	QRD148J-134S	130K 1/4W CARBON	D
R176	QRD148J-114S	110K 1/4W CARBON	A
R176	QRD148J-114S	110K 1/4W CARBON	B
R176	QRD148J-114S	110K 1/4W CARBON	C
R176	QRD148J-114S	110K 1/4W CARBON	E
R176	QRD148J-134S	130K 1/4W CARBON	D
R179	QRD148J-332S	3.3K 1/4W CARBON	
R180	QRD148J-332S	3.3K 1/4W CARBON	
R181	QRD148J-103S	10K 1/4W CARBON	
R182	QRD148J-103S	10K 1/4W CARBON	
R183	QRD148J-682S	6.8K 1/4W CARBON	
R184	QRD148J-682S	6.8K 1/4W CARBON	
R185	QRD148J-681S	680 1/4W CARBON	
R186	QRD148J-103S	10K 1/4W CARBON	
R187	QRD148J-103S	10K 1/4W CARBON	
R188	QRD148J-273S	27K 1/4W CARBON	
R189	QRD148J-273S	27K 1/4W CARBON	
R201	QRD148J-103S	10K 1/4W CARBON	D
R203	QRD148J-104S	100K 1/4W CARBON	D
R204	QRD148J-471S	470 1/4W CARBON	D
R205	QRD148J-103S	10K 1/4W CARBON	D
R206	QRD148J-103S	10K 1/4W CARBON	D

Safety Parts

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R207	QRD148J-103S	10K 1/4W CARBON	D
R208	QRD148J-331S	330 1/4W CARBON	D
R209	QRD148J-472S	4.7K 1/4W CARBON	D
R221	QRD148J-103S	10K 1/4W CARBON	
R223	QRD148J-104S	100K 1/4W CARBON	
R224	QRD148J-471S	470 1/4W CARBON	
R225	QRD148J-103S	10K 1/4W CARBON	D
R226	QRD148J-103S	10K 1/4W CARBON	D
R227	QRD148J-331S	330 1/4W CARBON	
R228	QRD148J-472S	4.7K 1/4W CARBON	
R301	QRD148J-222S	2.2K 1/4W CARBON	
R302	QRD148J-222S	2.2K 1/4W CARBON	
R303	QRD148J-473S	47K 1/4W CARBON	
R304	QRD148J-473S	47K 1/4W CARBON	
R305	QRD148J-821S	820 1/4W CARBON	
R306	QRD148J-821S	820 1/4W CARBON	
R307	QRD148J-393S	39K 1/4W CARBON	
R308	QRD148J-393S	39K 1/4W CARBON	
R309	QRD148J-474S	470K 1/4W CARBON	
R310	QRD148J-474S	470K 1/4W CARBON	
R311	QRD148J-104S	100K 1/4W CARBON	
R312	QRD148J-104S	100K 1/4W CARBON	
R321	QRD148J-181S	180 1/4W CARBON	
R322	QRD148J-101S	100 1/4W CARBON	
R323	QRD148J-473S	47K 1/4W CARBON	
R324	QRD148J-225S	2.2M 1/4W CARBON	
R325	QRD148J-104S	100K 1/4W CARBON	
R326	QRD148J-103S	10K 1/4W CARBON	
R327	QRD148J-104S	100K 1/4W CARBON	
R329	QRD148J-103S	10K 1/4W CARBON	
R330	QRD148J-103S	10K 1/4W CARBON	
R331	QRD148J-103S	10K 1/4W CARBON	
R332	QRD145J-470S	47 1/4W UNF. CARBON	C
R332	QRD145J-470S	47 1/4W UNF. CARBON	E
R332	QRD145J-470S	47 1/4W UNF. CARBON	
R341	QRD148J-332S	3.3K 1/4W CARBON	
R342	QRD148J-332S	3.3K 1/4W CARBON	
R343	QRD148J-103S	10K 1/4W CARBON	
R344	QRD148J-104S	100K 1/4W CARBON	
R346	QRD148J-103S	10K 1/4W CARBON	
R347	QRD148J-474S	470K 1/4W CARBON	
R348	QRD148J-474S	470K 1/4W CARBON	
R349	QRD145J-470S	47 1/4W UNF. CARBON	C
R349	QRD145J-470S	47 1/4W UNF. CARBON	D
R349	QRD145J-470S	47 1/4W UNF. CARBON	E
R351	QRD148J-223S	22K 1/4W CARBON	
R352	QRD148J-223S	22K 1/4W CARBON	
R353	QRD148J-683S	68K 1/4W CARBON	
R354	QRD148J-683S	68K 1/4W CARBON	
R361	QRD148J-222S	2.2K 1/4W CARBON	
R362	QRD148J-152S	1.5K 1/4W CARBON	
R365	QRD148J-152S	1.5K 1/4W CARBON	
R401	QRD148J-104S	100K 1/4W CARBON	
R402	QRD148J-823S	82K 1/4W CARBON	
R403	QRD148J-683S	68K 1/4W CARBON	
R404	QRD148J-683S	68K 1/4W CARBON	
R405	QRD148J-472S	4.7K 1/4W CARBON	A
R406	QRD148J-102S	1K 1/4W CARBON	
R407	QRD148J-222S	2.2K 1/4W CARBON	
R408	QRD148J-152S	1.5K 1/4W CARBON	A
R408	QRD148J-152S	1.5K 1/4W CARBON	B
R408	QRD148J-152S	1.5K 1/4W CARBON	C
R408	QRD148J-152S	1.5K 1/4W CARBON	E
R408	QRD148J-682S	6.8K 1/4W CARBON	D
R409	QRD148J-271S	270 1/4W CARBON	
R410	QRD148J-103S	10K 1/4W CARBON	
R411	QRD148J-472S	4.7K 1/4W CARBON	
R412	QRD148J-151S	150 1/4W CARBON	
R421	QRD148J-472S	4.7K 1/4W CARBON	C
R421	QRD148J-472S	4.7K 1/4W CARBON	D
R421	QRD148J-472S	4.7K 1/4W CARBON	E
R422	QRD148J-393S	39K 1/4W CARBON	
R423	QRD148J-222S	2.2K 1/4W CARBON	
R441	QRD148J-104S	100K 1/4W CARBON	
R442	QRD148J-104S	100K 1/4W CARBON	
R443	QRD148J-104S	100K 1/4W CARBON	
R444	QRD148J-104S	100K 1/4W CARBON	
R445	QRD148J-104S	100K 1/4W CARBON	
R446	QRD148J-104S	100K 1/4W CARBON	
R447	QRD148J-104S	100K 1/4W CARBON	
R448	QRD148J-104S	100K 1/4W CARBON	
R449	QRD148J-104S	100K 1/4W CARBON	
R450	QRD148J-104S	100K 1/4W CARBON	
R451	QRD148J-104S	100K 1/4W CARBON	
R452	QRD148J-104S	100K 1/4W CARBON	

Safety Parts

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R453	QRD148J-223S	22K 1/4W CARBON	A
R454	QRG022J-331AM	330 2W O.M.FILM	B
R454	QRG022J-331AM	330 2W O.M.FILM	C
R454	QRG026J-331AF	330 2W O.M.FILM	D
R454	QRG026J-331AF	330 2W O.M.FILM	E
R454	QRG026J-331AF	330 2W O.M.FILM	C
R455	QRD148J-182S	1.8K 1/4W CARBON	D
R455	QRD148J-182S	1.8K 1/4W CARBON	E
R455	QRD148J-182S	1.8K 1/4W CARBON	A
R455	QRD148J-222S	2.2K 1/4W CARBON	B
R455	QRD148J-222S	2.2K 1/4W CARBON	B
VR351	QVUB01B-EF5B	VARIABLE	
VR352	QVWA01W-EF5C	VARIABLE	

Safety Parts

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
SW414	ESP0001-007	PUSH SWITCH	
SW415	QST8101-E02	PUSH SWITCH	C
SW415	QST8101-E02	PUSH SWITCH	D
SW415	QST8101-E02	PUSH SWITCH	E
SW421	QSP2256-001	PUSH SWITCH	
SW422	QSS1201-039	SLIDE SWITCH	B
XT401	ECX0007-200KC	CRYSTAL	

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	EMB01YV-201A	ANT.TERMINAL	E
	EMN00TV-402A	PIN JACK ASSY	
	EMN00TV-402A	PIN JACK ASSY	
	E03572-016	TERMINAL BOARD	A
	E03572-016	TERMINAL BOARD	B
	E03572-016	TERMINAL BOARD	C
	E03572-016	TERMINAL BOARD	D
	E11091-002	CIRCUIT BOARD	
	E65654-001	SPACER	C
	E65654-001	SPACER	D
	E65654-001	SPACER	E
	E67764-002	TERMINAL ASSY	
	E67910-001	SPACER	
	E70225-001	EARTH PLATE	
	E70859-001	EARTH PLATE	
	E72108-001	SHIELD CASE	
	E72428-001	BRACKET	E
	QXTG309-010	SPAGHETTI	A
L101	EQR2304-005	OSC.COIL	
L102	EQR2304-006	RF COIL	
L103	EQL3001-1R5KY	INDUCTOR	
L111	EQR2404-004	RF COIL	D
L201	EQR1111-005	RF COIL	D
L202	EQR1307-006	OSC.COIL	
L221	EQR1111-006	RF COIL	
L222	EQR1207-006	RF COIL	
L441	EQL3001-102KY	INDUCTOR	
P702	E04365-003	SOCKET ASSY	
T141	EQT2140-011	I.F.TRANSFORMER	
CF141	ECB2118-001R	CERAMIC FILTER	C
CF141	ECB2118-001R	CERAMIC FILTER	D
CF141	ECB2118-001R	CERAMIC FILTER	E
CF141	ECB2123-001R	CERAMIC FILTER	A
CF141	ECB2123-001R	CERAMIC FILTER	B
CF142	ECB2118-001R	CERAMIC FILTER	C
CF142	ECB2118-001R	CERAMIC FILTER	D
CF142	ECB2118-001R	CERAMIC FILTER	E
CF142	ECB2123-001R	CERAMIC FILTER	A
CF142	ECB2123-001R	CERAMIC FILTER	B
CF143	ECB1560-001	CERAMIC FILTER	
CF171	ECX0000-456KS	RESONATOR	
FL441	ELU0001-016	F.L.TUBE	
LF101	EQF0201-004	B.P.FILTER	E
LF171	EQF0102-001	FILTER	E
SW301	ESP0001-011	PUSH SWITCH	
SW302	ESP0001-011	PUSH SWITCH	
SW303	ESP0001-011	PUSH SWITCH	
SW401	ESP0001-007	PUSH SWITCH	
SW402	ESP0001-007	PUSH SWITCH	
SW403	ESP0001-007	PUSH SWITCH	
SW404	ESP0001-007	PUSH SWITCH	
SW405	ESP0001-007	PUSH SWITCH	
SW406	ESP0001-007	PUSH SWITCH	
SW407	ESP0001-007	PUSH SWITCH	
SW408	ESP0001-007	PUSH SWITCH	
SW409	ESP0001-007	PUSH SWITCH	
SW410	ESP0001-007	PUSH SWITCH	
SW411	ESP0001-007	PUSH SWITCH	D
SW412	ESP0001-007	PUSH SWITCH	
SW413	ESP0001-007	PUSH SWITCH	

3-(2) ENH-055 □ Audio P. C. Board Ass'y


Note: ENH-055 □ varies according to the areas employed. See note (1) when placing an order.

Note (1)

P.C. Board Ass'y	Designated Areas
ENH-055 I	U.S.A. & Canada
ENH-055 J	U.S. Military Market & Other countries
ENH-055 K	Europe
ENH-055 LBS	U.K.
ENH-055 M	West Germany
ENH-055 N	Australia

Note (2)

They symbols (赤、黒、白 etc.) on-P.C. Board surface are factory process only.

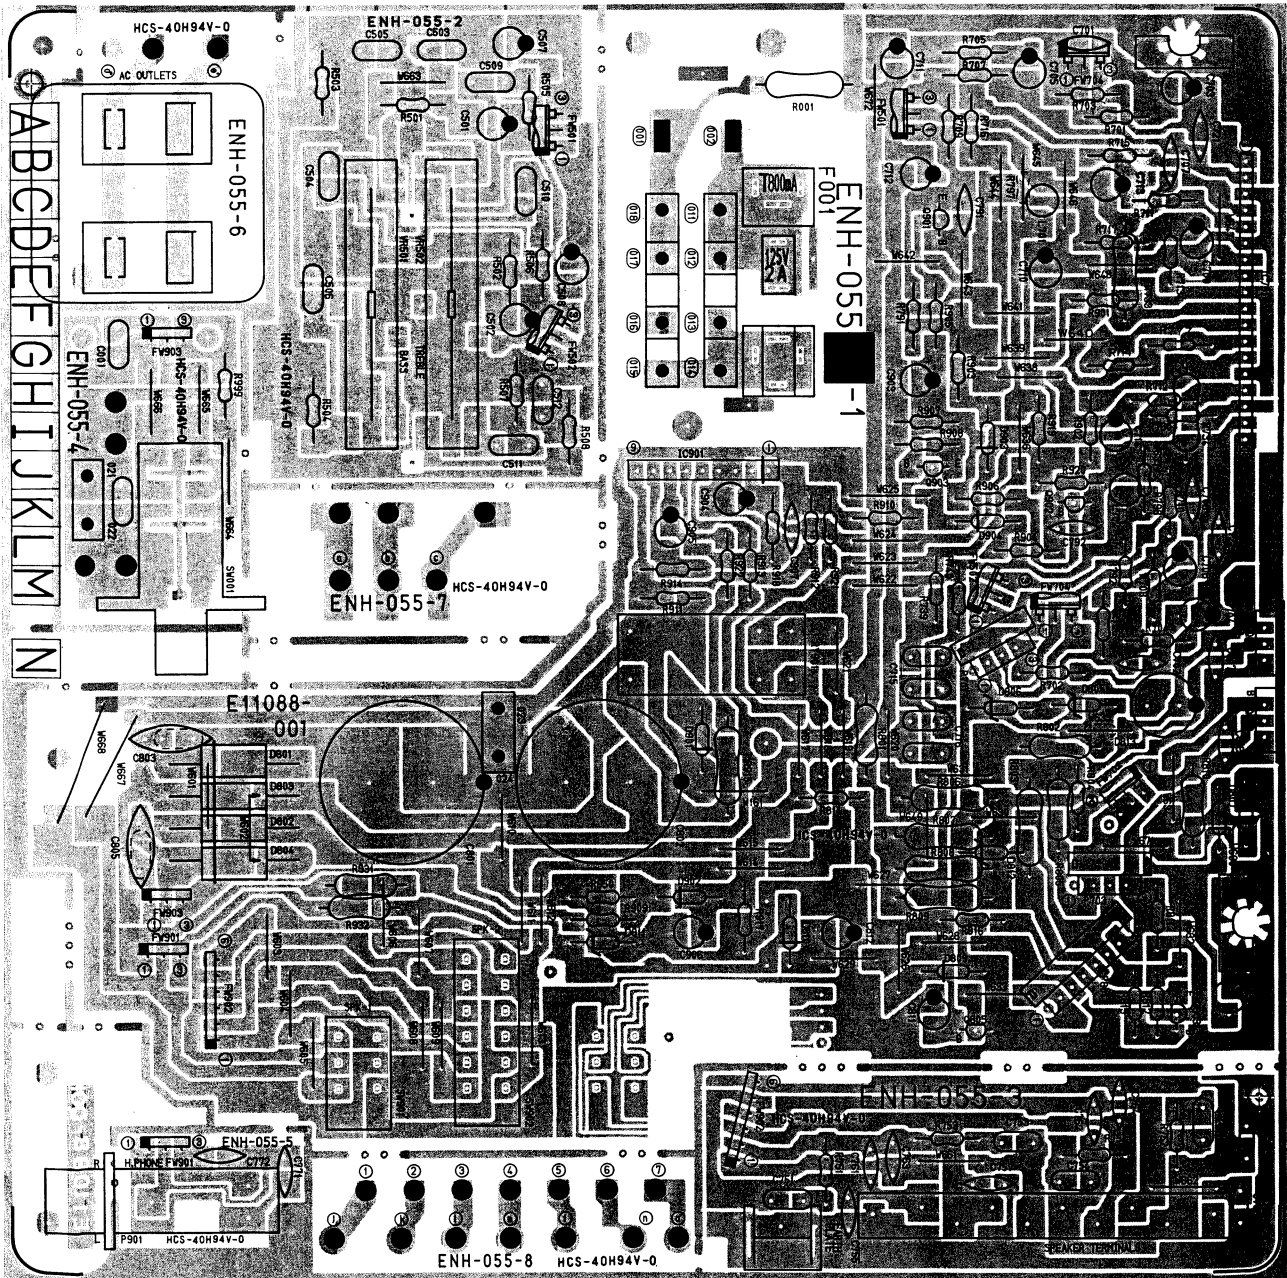

Transistors

ITEM	PART NUMBER	DESCRIPTION		AREA
		MAKER		
Q801	2SB941A(P,Q)	SILICON	MATSUSHITA	
Q802	2SD1265A(O,P)	SILICON	MATSUSHITA	
Q803	2SC2235(O,Y)	SILICON	TOSHIBA	
Q805	2SC458(C,D)	SILICON	HITACHI	
Q901	2SC1775AV(E,F)	SILICON	HITACHI	
Q902	2SC1775AV(E,F)	SILICON	HITACHI	
Q903	2SA733A(P,Q)	SILICON	NEC	

ICs

△	ITEM	PART NUMBER	DESCRIPTION		AREA
				MAKER	
	IC701	STK4141MK2	I.C.	SANYO	
	IC901	TA7317P	I.C.	TOSHIBA	

Diodes

ITEM	PART NUMBER	DESCRIPTION		AREA
			MAKER	
D801	S3V20F	SILICON		
D802	S3V20F	SILICON		
D803	S3V20F	SILICON		
D804	S3V20F	SILICON		
D805	RD13EB3	ZENER	NEC	
D806	RD13EB3	ZENER	NEC	
D807	1S2473	SILICON	ROHM	K
D807	1S2473	SILICON	ROHM	LBS
D807	1S2473	SILICON	ROHM	M
D807	1S2473	SILICON	ROHM	N
D808	RD12EB3	ZENER	NEC	
D810	1S2473	SILICON	ROHM	
D811	RD5.1EB2	ZENER	NEC	
D812	RD9.1EB3	ZENER	NEC	
D813	1S2473	SILICON	ROHM	K
D813	1S2473	SILICON	ROHM	LBS
D813	1S2473	SILICON	ROHM	M
D813	1S2473	SILICON	ROHM	N
D901	1S2473	SILICON	ROHM	
D902	1S2473	SILICON	ROHM	
D903	1S2473	SILICON	ROHM	
D904	1S2473	SILICON	ROHM	

Capacitors

CAPACITORS						
△	ITEM	PART NUMBER	DESCRIPTION			AREA
	C001	QFM82AK-104	0.1MF	100V	MYLAR	K
	C001	QFM82AK-104	0.1MF	100V	MYLAR	LBS
	C501	QET51HM-105	1MF	50V	ELECTRO	
	C502	QET51HM-105	1MF	50V	ELECTRO	
	C503	QFN81HK-153	0.015MF	50V	MYLAR	
	C504	QFN81HK-153	0.015MF	50V	MYLAR	
	C505	QFN81HK-823	0.082MF	50V	MYLAR	
	C506	QFN81HK-823	0.082MF	50V	MYLAR	
	C507	QET51HM-105	1MF	50V	ELECTRO	
	C508	QET51HM-105	1MF	50V	ELECTRO	
	C509	QFN81HK-332	3300PF	50V	MYLAR	
	C510	QFN81HK-332	3300PF	50V	MYLAR	
	C511	QFN81HK-183	0.018MF	50V	MYLAR	
	C512	QFN81HK-183	0.018MF	50V	MYLAR	
	C701	QCS21HJ-680	68PF	50V	CERAMIC	I
	C701	QCS21HJ-680	68PF	50V	CERAMIC	J
	C701	QCS21HJ-680	68PF	50V	CERAMIC	K
	C701	QCS21HJ-680	68PF	50V	CERAMIC	LBS
	C702	QCS21HJ-680	68PF	50V	CERAMIC	N
	C702	QCS21HJ-680	68PF	50V	CERAMIC	I
	C702	QCS21HJ-680	68PF	50V	CERAMIC	J
	C702	QCS21HJ-680	68PF	50V	CERAMIC	K
	C702	QCS21HJ-680	68PF	50V	CERAMIC	LBS
	C703	QET51HM-225	2.2MF	50V	ELECTRO	N
	C704	QEH61HM-225	2.2MF	50V	ELECTRO	
	C705	QET51AM-476	47MF	10V	ELECTRO	
	C706	QEH61AM-476	47MF	10V	ELECTRO	
	C707	QCS21HJ-100	10PF	50V	CERAMIC	
	C708	QCS21HJ-100	10PF	50V	CERAMIC	

Capacitors

△	ITEM	PART NUMBER	DESCRIPTION			AREA
	C709	QEH61HM-106	10MF	50V	ELECTRO	
	C710	QETB1HM-227M	220MF	50V	ELECTRO	
	C711	QETB1HM-475	4.7MF	50V	ELECTRO	
	C712	QETB1HM-475	4.7MF	50V	ELECTRO	
	C713	QET51HM-476	47MF	50V	ELECTRO	
	C714	QET51HM-476	47MF	50V	ELECTRO	
	C715	QFN81HK-473	0.047MF	50V	MYLAR	
	C716	QFN81HK-473	0.047MF	50V	MYLAR	
	C717	QFN81HK-473	0.047MF	50V	MYLAR	I
	C717	QFN81HK-473	0.047MF	50V	MYLAR	K
	C717	QFN81HK-473	0.047MF	50V	MYLAR	LBS
	C717	QFN81HK-473	0.047MF	50V	MYLAR	M
	C718	QFN81HK-473	0.047MF	50V	MYLAR	N
	C718	QFN81HK-473	0.047MF	50V	MYLAR	I
	C718	QFN81HK-473	0.047MF	50V	MYLAR	K
	C718	QFN81HK-473	0.047MF	50V	MYLAR	LBS
	C718	QFN81HK-473	0.047MF	50V	MYLAR	M
	C718	QFN81HK-473	0.047MF	50V	MYLAR	N
	C721	QCS21HJ-221	220PF	50V	CERAMIC	
	C722	QCS21HJ-221	220PF	50V	CERAMIC	
	C751	QFN81HK-473	0.047MF	50V	MYLAR	M
	C752	QFN81HK-473	0.047MF	50V	MYLAR	M
	C753	QFN81HK-473	0.047MF	50V	MYLAR	M
	C754	QFN81HK-473	0.047MF	50V	MYLAR	M
	C755	QCS21HJ-681	680PF	50V	CERAMIC	M
	C756	QCS21HJ-681	680PF	50V	CERAMIC	M
	C757	QCS21HJ-331	330PF	50V	CERAMIC	M
	C758	QCS21HJ-331	330PF	50V	CERAMIC	M
	C761	QCS21HJ-101	100PF	50V	CERAMIC	M
	C762	QCS21HJ-101	100PF	50V	CERAMIC	M
	C763	QCS21HJ-101	100PF	50V	CERAMIC	M
	C764	QCS21HJ-101	100PF	50V	CERAMIC	M
	C771	QCS21HJ-101	100PF	50V	CERAMIC	M
	C772	QCS21HJ-101	100PF	50V	CERAMIC	M
	C801	QEZO072-338	3300MF		NON POLE	
	C802	QEZO072-338	3300MF		NON POLE	
	C803	QFM82AK-104	0.1MF	100V	MYLAR	M
	C803	QFM82AK-473	0.047MF	100V	MYLAR	I
	C803	QFM82AK-473	0.047MF	100V	MYLAR	J
	C803	QFM82AK-473	0.047MF	100V	MYLAR	K
	C803	QFM82AK-473	0.047MF	100V	MYLAR	LBS
	C803	QFM82AK-473	0.047MF	100V	MYLAR	N
	C805	QFM82AK-104	0.1MF	100V	MYLAR	M
	C805	QFM82AK-473	0.047MF	100V	MYLAR	I
	C805	QFM82AK-473	0.047MF	100V	MYLAR	J
	C805	QFM82AK-473	0.047MF	100V	MYLAR	K
	C805	QFM82AK-473	0.047MF	100V	MYLAR	LBS
	C805	QFM82AK-473	0.047MF	100V	MYLAR	N
	C806	QEH51VM-107	100MF	35V	ELECTRO	
	C807	QCF21HP-103	0.01MF	50V	CERAMIC	
	C808	QETB1EM-107	100MF	25V	ELECTRO	
	C811	QETB1HM-475	4.7MF	50V	ELECTRO	
	C812	QETB1CM-476	47MF	16V	ELECTRO	
	C813	QCF21HP-103	0.01MF	50V	CERAMIC	
	C815	QCY21HK-472	4700PF	50V	CERAMIC	M
	C903	QETB1HM-226	22MF	50V	ELECTRO	
	C904	QETB1AM-107	100MF	10V	ELECTRO	
	C905	QETB1CM-226	22MF	16V	ELECTRO	
	C906	QETB1HM-105	1MF	50V	ELECTRO	

Resistors

△	ITEM	PART NUMBER	DESCRIPTION			AREA
	R001	QRC128K-275EM	2.7M	1/2W	COMPOSI	I
	R501	QRD148J-203S	20K	1/4W	CARBON	
	R502	QRD148J-203S	20K	1/4W	CARBON	
	R503	QRD148J-362S	3.6K	1/4W	CARBON	
	R504	QRD148J-362S	3.6K	1/4W	CARBON	
	R505	QRD148J-472S	4.7K	1/4W	CARBON	
	R506	QRD148J-472S	4.7K	1/4W	CARBON	
	R507	QRD148J-821S	820	1/4W	CARBON	
	R508	QRD148J-821S	820	1/4W	CARBON	
	R701	QRD148J-222S	2.2K	1/4W	CARBON	
	R702	QRD148J-222S	2.2K	1/4W	CARBON	
	R703	QRD148J-104S	100K	1/4W	CARBON	
	R704	QRD148J-104S	100K	1/4W	CARBON	
	R705	QRD148J-821S	820	1/4W	CARBON	
	R706	QRD148J-821S	820	1/4W	CARBON	
	R707	QRD148J-133S	13K	1/4W	CARBON	
	R708	QRD148J-133S	13K	1/4W	CARBON	
	R709	QRD148J-823S	82K	1/4W	CARBON	
	R710	QRD148J-823S	82K	1/4W	CARBON	
△	R711	QRD145J-222S	2.2K	1/4W	UNF. CARBON	K

△ Safety parts

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
△ R711	QRD145J-222S	2.2K 1/4W UNF.CARBON	LBS
△ R711	QRD145J-222S	2.2K 1/4W UNF.CARBON	M
△ R711	QRD145J-222S	2.2K 1/4W UNF.CARBON	N
△ R711	QRD148J-222S	2.2K 1/4W CARBON	I
△ R711	QRD148J-222S	2.2K 1/4W CARBON	J
△ R712	QRD145J-222S	2.2K 1/4W UNF.CARBON	K
△ R712	QRD145J-222S	2.2K 1/4W UNF.CARBON	LBS
△ R712	QRD145J-222S	2.2K 1/4W UNF.CARBON	M
△ R712	QRD145J-222S	2.2K 1/4W UNF.CARBON	N
△ R712	QRD148J-222S	2.2K 1/4W CARBON	I
△ R712	QRD148J-222S	2.2K 1/4W CARBON	J
△ R713	QRD148J-102S	1K 1/4W CARBON	
△ R714	QRD145J-101S	100 1/4W UNF.CARBON	I
△ R714	QRD145J-101S	100 1/4W UNF.CARBON	J
△ R714	QRD146J-101S	100 1/4W UNF.C.RESI	K
△ R714	QRD146J-101S	100 1/4W UNF.C.RESI	LBS
△ R714	QRD146J-101S	100 1/4W UNF.C.RESI	M
△ R714	QRD146J-101S	100 1/4W UNF.C.RESI	N
△ R715	QRD145J-222S	2.2K 1/4W UNF.CARBON	K
△ R715	QRD145J-222S	2.2K 1/4W UNF.CARBON	LBS
△ R715	QRD145J-222S	2.2K 1/4W UNF.CARBON	M
△ R715	QRD145J-222S	2.2K 1/4W UNF.CARBON	N
△ R715	QRD148J-222S	2.2K 1/4W CARBON	I
△ R715	QRD148J-222S	2.2K 1/4W CARBON	J
△ R716	QRD145J-222S	2.2K 1/4W UNF.CARBON	K
△ R716	QRD145J-222S	2.2K 1/4W UNF.CARBON	LBS
△ R716	QRD145J-222S	2.2K 1/4W UNF.CARBON	M
△ R716	QRD145J-222S	2.2K 1/4W UNF.CARBON	N
△ R716	QRD148J-222S	2.2K 1/4W CARBON	I
△ R716	QRD148J-222S	2.2K 1/4W CARBON	J
△ R717	QRD148J-272S	2.7K 1/4W CARBON	
△ R733	QRX022J-R22AM	0.22 2W M.FILM	
△ R734	QRX022J-R22AM	0.22 2W M.FILM	
△ R739	QRD145J-330S	33 1/4W UNF.CARBON	
△ R740	QRD145J-330S	33 1/4W UNF.CARBON	
△ R751	QRZ0062-100	10 1/4W FUSIBLE	M
△ R752	QRZ0062-100	10 1/4W FUSIBLE	M
△ R753	QRZ0062-100	10 1/4W FUSIBLE	M
△ R754	QRZ0062-100	10 1/4W FUSIBLE	M
△ R760	QRD145J-4R7S	4.7 1/4W UNF.CARBON	
△ R777	QRD145J-4R7S	4.7 1/4W UNF.CARBON	I
△ R777	QRD145J-4R7S	4.7 1/4W UNF.CARBON	J
△ R777	QRZ0061-4R7	4.7 FUSIBLE	K
△ R777	QRZ0061-4R7	4.7 FUSIBLE	LBS
△ R777	QRZ0061-4R7	4.7 FUSIBLE	M
△ R777	QRZ0061-4R7	4.7 FUSIBLE	N
△ R777	QRZ0061-4R7	4.7 FUSIBLE	
△ R797	QRD145J-470S	47 1/4W UNF.CARBON	M
△ R798	QRD145J-470S	47 1/4W UNF.CARBON	M
△ R801	QRD125J-2R2	2.2 1/2W UNF.CARBON	
△ R802	QRD125J-122	1.2K 1/2W UNF.CARBON	
△ R803	QRG022J-471AM	470 2W O.M.FILM	
△ R804	QRD145J-150S	15 1/4W UNF.CARBON	I
△ R804	QRD145J-150S	15 1/4W UNF.CARBON	J
△ R804	QRZ0062-150	15 1/4W FUSIBLE	K
△ R804	QRZ0062-150	15 1/4W FUSIBLE	LBS
△ R804	QRZ0062-150	15 1/4W FUSIBLE	M
△ R804	QRZ0062-150	15 1/4W FUSIBLE	N
△ R806	QRG022J-101AM	100 2W O.M.FILM	I
△ R806	QRG022J-101AM	100 2W O.M.FILM	J
△ R806	QRG026J-101AF	100 2W O.M.FILM	K
△ R806	QRG026J-101AF	100 2W O.M.FILM	LBS
△ R806	QRG026J-101AF	100 2W O.M.FILM	M
△ R806	QRG026J-101AF	100 2W O.M.FILM	N
△ R807	QRG022J-101AM	100 2W O.M.FILM	I
△ R807	QRG022J-101AM	100 2W O.M.FILM	J
△ R807	QRG026J-101AF	100 2W O.M.FILM	K
△ R807	QRG026J-101AF	100 2W O.M.FILM	LBS
△ R807	QRG026J-101AF	100 2W O.M.FILM	M
△ R807	QRG026J-101AF	100 2W O.M.FILM	N
△ R810	QRD125J-182	1.8K 1/2W UNF.CARBON	
△ R811	QRD145J-680S	68 1/4W UNF.CARBON	
△ R812	QRD148J-122S	1.2K 1/4W CARBON	I
△ R812	QRD148J-122S	1.2K 1/4W CARBON	J
△ R812	QRD148J-182S	1.8K 1/4W CARBON	K
△ R812	QRD148J-182S	1.8K 1/4W CARBON	LBS
△ R812	QRD148J-182S	1.8K 1/4W CARBON	M
△ R812	QRD148J-182S	1.8K 1/4W CARBON	N
△ R813	QRD148J-122S	1.2K 1/4W CARBON	I
△ R813	QRD148J-122S	1.2K 1/4W CARBON	J
△ R813	QRD148J-202S	2K 1/4W CARBON	K
△ R813	QRD148J-202S	2K 1/4W CARBON	LBS
△ R813	QRD148J-202S	2K 1/4W CARBON	M
△ R813	QRD148J-202S	2K 1/4W CARBON	N
△ R814	QRD148J-563S	56K 1/4W CARBON	
△ R816	QRD148J-473S	47K 1/4W CARBON	

△ Safety parts

Resistors

ITEM	PART NUMBER	DESCRIPTION	AREA
R901	QRD148J-152S	1.5K 1/4W CARBON	
R902	QRD148J-152S	1.5K 1/4W CARBON	
R903	QRD148J-562S	5.6K 1/4W CARBON	
R904	QRD148J-562S	5.6K 1/4W CARBON	
R905	QRD148J-123S	12K 1/4W CARBON	
R906	QRD148J-123S	12K 1/4W CARBON	
R907	QRD148J-103S	10K 1/4W CARBON	
R908	QRD148J-332S	3.3K 1/4W CARBON	
R909	QRD148J-472S	4.7K 1/4W CARBON	
R910	QRD148J-563S	56K 1/4W CARBON	
R911	QRD148J-183S	18K 1/4W CARBON	
R912	QRD148J-683S	68K 1/4W CARBON	
R913	QRD148J-153S	15K 1/4W CARBON	
R914	QRD148J-224S	220K 1/4W CARBON	
△ R915	QRG022J-391AM	390 2W O.M.FILM	
R917	QRD148J-223S	22K 1/4W CARBON	
R918	QRD148J-104S	100K 1/4W CARBON	
R919	QRD148J-104S	100K 1/4W CARBON	
R920	QRD148J-823S	82K 1/4W CARBON	
R921	QRD148J-563S	56K 1/4W CARBON	
R922	QRD148J-820S	82 1/4W CARBON	
△ R931	QRD125J-221	220 1/2W UNF.CARBON	
△ R932	QRD125J-221	220 1/2W UNF.CARBON	
△ R950	QRD148J-472S	4.7K 1/4W CARBON	
R999	QRD148J-473S	47K 1/4W CARBON	
VR501	QVUB01C-E15B	VARIABLE	
VR502	QVUB01C-E15B	VARIABLE	


△ Safety parts

Others

ITEM	PART NUMBER	DESCRIPTION	AREA
	EMB90TV-801A	SPK.TERMINAL	
	EMG7331-001	FUSE CLIP	K
	EMG7331-001	FUSE CLIP	LBS
	EMG7331-001	FUSE CLIP	M
	EMG7331-001	FUSE CLIP	N
	E11088-001	CIRCUIT BOARD	I
	E11088-001	CIRCUIT BOARD	J
	E11088-001	CIRCUIT BOARD	K
	E11088-001	CIRCUIT BOARD	M
	E11088-001	CIRCUIT BOARD	N
	E11088-001BS	CIRCUIT BOARD	LBS
	E303213-001	HEAT SINK	
	E45524-002	FUSE CLIP	I
	E48269-001	SPACER	K
	E48269-001	SPACER	LBS
	E48269-001	SPACER	M
	E48269-001	SPACER	N
	E65508-002	TAB	
	E65654-001	SPACER	K
	E65654-001	SPACER	LBS
	E65654-001	SPACER	M
	E65654-001	SPACER	N
	E67764-102	TERMINAL ASSY	
	E67764-102	TERMINAL ASSY	
	E67764-102	TERMINAL ASSY	I
	E67764-102	TERMINAL ASSY	J
	E67764-202	TERMINAL	I
	E67764-202	TERMINAL	K
	E67764-202	TERMINAL	LBS
	E67764-202	TERMINAL	M
	E67764-202	TERMINAL	N
	E70225-001	EARTH PLATE	
	E70859-001	EARTH PLATE	
	E71140-001	SPRING	
△	QMC0437-002	AC SOCKET	J
△	QMC0440-001	AC SOCKET	I
	SBSB3008N	SCREW	
	SBSE3008Z	SCREW	
	L701	INDUCTOR	M
	L702	INDUCTOR	M
	P701	SOCKET ASSY	
	P801	6P CONNECTOR	
	P901	JACK ASSY	
	RY901	RELAY	
	SW001	PUSH SWITCH	
	SW901	PUSH SWITCH	
	SW902	PUSH SWITCH	

△ Safety parts

4. Packing Materials and Part Numbers

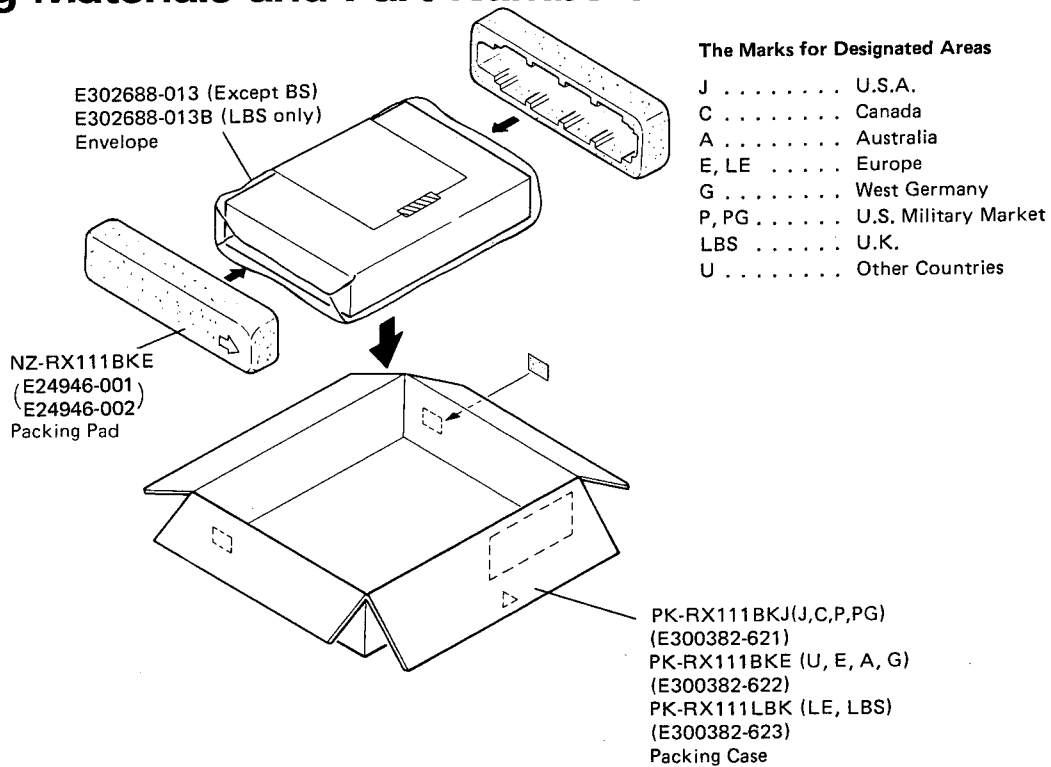

5. Accessories List

△	Part Number	Part Name	Description	Areas
	E30580-1295A E30580-1295ABS BT20025H BT20048B BT20029C	Instruction Book Instruction Book Warranty Card Warranty Card Warranty Card		Except. LBS LBS only C P, PG, J A
	BT20064 BT20060 BT20071A BT20046B BT20066	Warranty Card Warranty Card Service Center Service Information Card EEC Agency		G BS C, J J, P, PG G, LBS
	BT20054-009A BT20044E E66416-003 E35497-013 E35497-015	FTZ Information Sheet Safety Instruction Envelope Caution Sheet Caution Sheet	110V 220V	G J J P U, PG
△	E03614-004 E67007-001 EQB4001-002 E04056 QMF51A2-1R6S	Bilt-in Antenna Wire Antenna Ass'y Bar Antenna Coil Siemens Plug Fuse		Except G G U, PG U, PG
△	QMF51A2-R80 QPGA005-00703 E41202-2 E41202-2B	Fuse Envelope Envelope Envelope		P U, P, PG Except LBS LBS

△ Safety parts

RX-111BK
RX-111LBK